



Building Systems Submittal Package

**Good Samaritan Hospital
One Forest
401 15th Ave.
Puyallup, WA 98372**

**1st Floor Start Room T.I.
and Change Order –
Fire Alarm System**

**Johnson Controls
9520 10th Ave. South
Suite 100
Seattle, WA 98108
Phone: (206) 291-1400
Fax: (206) 291-1500
www.JohnsonControls.com**

**Precision Electric
15323 NE 90th St
Redmond, WA 98052**



This Page Left Blank Intentionally



Table of Contents

Section I:	Scheduling/Installation Checklist
Section II:	Equipment List & Equipment Datasheets
Section III:	Hardware Warranty
Section IV:	Manufacturer's Recommendation
Section V:	Testing Procedure for Devices



This Page Left Blank Intentionally



Scheduling

Thank you for working with Johnson Controls on this project. We would like to take this opportunity to introduce you to the project team. So'o Kobayashi is the Johnson Controls Project Manager(s) assigned to this project to help with generic project information. James Beesley is the project engineer to assist with drawings/engineering questions. Yvonne Thompson is available for scheduling technicians.

Office: (206) 291-1400
Fax: (206) 291-1500

In an effort to assist you in your installation we require you to arrange a Pre-Construction meeting with one of our Technicians. This meeting will allow your field foreman to ask any questions they may have in regards to the installation of your system. Based on the equipment quantities and current scope of work our Technician will need no less than 5 business days to complete all necessary programming and commissioning from the time the below checklist is complete prior to any AHJ testing. Please make sure this time is allowed for in the General Construction CPM schedule as it can not be compressed. Change orders, change of scope, etc. may require additional time allotment to field personnel.

Installation Checklist

Johnson Controls is committed to providing the highest quality service available. As part of this service we want to ensure that the installation results in a trouble-free system. Please review the Checklist below and ensure each item is complete prior to our site visit.

A Technician will be dispatched only after the below checklist items have been completed. If these items are not completed prior to the visit by our technician, you may incur additional charges not covered by our quotation. Please feel free to contact our office if you have any questions.

- Fire Alarm Panel(s) have been mounted and all wiring (power, MAPNET, signal, door-holders, etc.) pulled into panel(s).
- All wiring pulled into panel(s) or junction boxes have been permanently marked with wire markers and can easily be identified by a Johnson Controls Technician.
- System Power is supplied and on a dedicated circuit (Do Not Energize prior to Technician visit).
- All peripheral devices have been mounted (Smoke Detectors still covered).
- All end-of-line resistors have been installed.
- All alarm initiating circuits (smoke detectors, pull stations, etc.) have been checked for shorts, opens and grounds.
- All alarm notification circuits (speakers, horns, strobes, etc.) have been checked for shorts, opens and grounds.
- All remaining wiring (door-holders, FACP 24VDC, etc.) has been checked.
- Flows, Tamper, and Pressure Switches installed, properly wired and adjusted.
- All devices are properly protected against construction dust and contamination.
- Contact us immediately if there is no digital dialer or system monitoring provisions already in place. The dialer, phone lines and service will be required for system testing.
- There are no missing parts or equipment.



This Page Left Blank Intentionally



Equipment List & Equipment Datasheets

Fire Alarm System

<u>Quantity</u>	<u>Product ID</u>	<u>Product Description</u>
1	4009-9201	NACExtender 120VACIDNet
2	2081-9272	Battery 6.2AH
37	4098-9792	Sensor Base
37	4098-9714	Smoke Sensor
1	2190-9161	Signal ZAM
16	4906-9153	Speaker Strobe Multi Candela Wall Mount
1	4906-9154	Speaker Strobe Multi Candela Ceiling Mount
2	4906-9101	Strobe Multi Candela Wall Mount
1	4090-9010	8 Amp Relay IAM

Equipment List subject to change.



This Page Left Blank Intentionally

Feature

Provides additional notification appliance circuit (NAC) capacity with flexible operation modes and power-limited design

Four, Class B NACs are standard:

- Rated 2 A each for conventional reverse polarity 24 VDC notification appliances and providing multiple operation modes
- Can be selected to provide synchronization for Simplex® visible notification strobe flashes
- Capable of controlling TrueAlert non-addressable notification appliances operating with SmartSync two-wire control mode**

Input control options:

- IDNet addressable communications from a Simplex model 4007ES, 4010, 4010ES, 4100ES, or 4100U Fire Alarm Control Panel**
- Or from one or two conventional 24 VDC NACs with multiple output control options

IDNet communications control benefits:

- Provides status monitoring and individual NAC control

using a single address per 4009 IDNet NAC Extender

- Supports IDNet “Device Level” earth fault location

WALKTEST operation is available with either input choice

Internal 8 A power supply/battery charger:

- Charges internal batteries up to 12.7 Ah or up to 18 Ah batteries in external cabinet
- Provides status monitoring of battery, input power, and earth faults
- Rated 8 A for “Special Application” appliances; including Simplex 4901, 4903, 4904, and 4906 Series horns, strobes, horn/strobes, and speaker/strobes
- Rated 6 A for “Regulated 24 DC” appliance power

Optional 4009 IDNet NAC Extender modules:

- IDNet Communications Repeater provides Class B or Class A output
- IDNet Communications Fiber Optic Receiver/Repeater, available as Class B or Class X
- Four additional Class B NACs, rated 1.5 A for Special Application appliances; 1 A for Regulated 24 DC appliance power
- Class A, Two Circuit Adapter Module


UL Listed to Standard 864

External Accessories

IDNet communication fiber optic transmitters:

- For applications requiring the data integrity available with fiber optic communications
- Available as Class B or Class X
- Mounts in standard six-gang electrical box

External battery cabinet for 18 Ah batteries

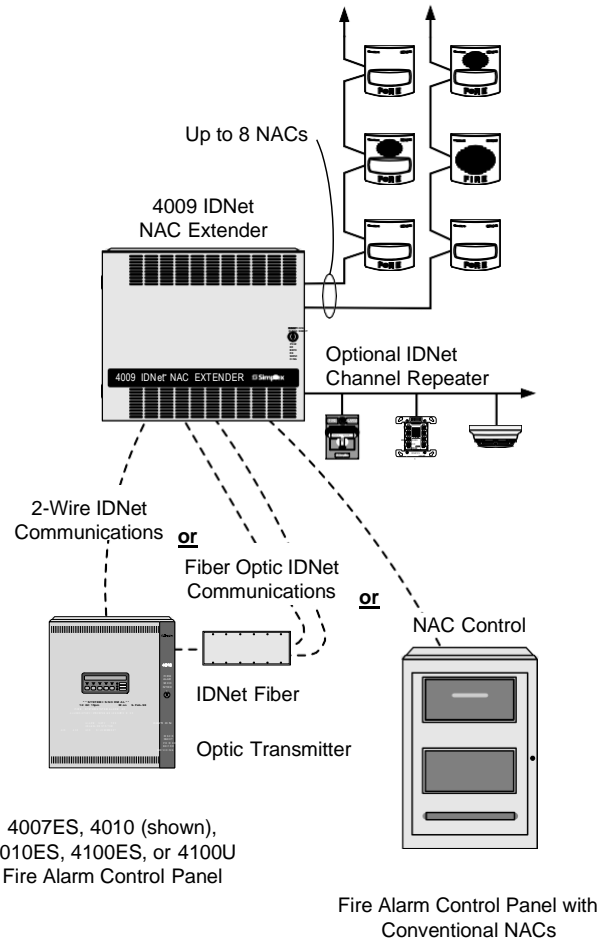

4009 IDNet NAC Extender Connection Reference Drawing

Introduction

ADA Compliance. Complying with the notification requirements of ADA (Americans with Disabilities Act) may require more notification appliance power than is available within the fire alarm control panel. When additional power is required, a Simplex 4009 IDNet NAC Extender can provide up to 8 A of NAC power with up to eight, supervised reverse polarity NACs.

Location Flexibility. The 4009 IDNet NAC Extender can be mounted close to a compatible dedicated host panel or can be located remotely for convenient power distribution. Multiple operation modes and multiple connection options further increase location flexibility.

Additional Information. For additional operation detail and application information, refer to Installation Instructions 574-181 and field wiring diagram 842-068.

* ULC listed model is 4009-9202CA. This product has been approved by the California State Fire Marshal (CSFM) pursuant to Section 13144.1 of the California Health and Safety Code. See CSFM Listing 7300-0026:214 for allowable values and/or conditions concerning material presented in this document. Accepted for use – City of New York Department of Buildings – MEA35-93E. Additional listings may be applicable; contact your local Simplex product supplier for the latest status. Listings and approvals under Simplex Time Recorder Co. are the property of Tyco Fire Protection Products.

** 4100U requires revision 11 software or higher for compatibility. 4010 requires revision 2

software or higher for compatibility.

Application and Operation Information

IDNet Addressable Communications Compatible.

Up to ten (10), 4009 IDNet NAC Extenders can be controlled per 4007ES, 4010ES, 4100ES, or 4100U IDNet communications channel; up to five (5) can be controlled on the 4010 IDNet communications channel. Each output NAC can be individually controlled for general alarm or selective area notification requiring only one point address per Extender. Individual Extender NACs can also be manually controlled from the host panel. IDNet controlled extenders will inform the host panel of troubles via IDNet communications. 4007ES, 4010ES, 4100ES, and 4100U control panels control using multi-point rules, refer to data sheet S4090-0011 for details.

Optional IDNet Repeaters. IDNet communications can be repeated with the optional IDNet Repeater Module or with the optional Fiber Optic Receiver Module. Up to 100 of the IDNet channel points can be repeated once (refer to pages 3 and 5 for details). Repeated IDNet communications also support the “device level” earth fault location utility of the host panel.

Hardware Control Applications. For applications where an existing (or new) conventional NAC needs additional power, the 4009 IDNet NAC Extender can be controlled directly from the NAC. Either one or two NACs, from either the same, or from different host fire alarm control panels, can be connected to control the 4009 IDNet NAC Extender output NACs. Multiple control selections provide flexible operation. (Refer to page 4 for more detail.) Alarms from the host panel will activate the four, 4009 IDNet NAC Extender NACs (or optionally, eight NACs) to extend the alarm.

The 4009 IDNet Extender monitors itself and each of its output NACs for trouble conditions, including earth faults. Extenders wired to conventional NACs will indicate a trouble by opening the path to the NAC’s end-of-line resistor, but retaining the ability to respond to alarms. Individual troubles are also annunciated by LEDs located on the 4009 IDNet NAC Extender main circuit board. (Refer to page 7 for more diagnostic information.)

Product Selection

Standard Models

Model	Description	
4009-9201	120 VAC input	4009 IDNet NAC Extender with 4, Class B NACs and 8 A power supply
4009-9202CA*		
4009-9301		

* ULC listed model

Optional Modules (for on-site installation)

Model	Description	Comments	
4009-9807	Additional four point NAC module, rated 1.5 A Special Application appliances; 1 A for Regulated 24 DC appliance power, Class B	One maximum	
4009-9808	Dual Class A adapter (for two NAC outputs)	Select as required (4 maximum)	
4009-9809	IDNet Repeater, output is Class A or Class B	Select either an IDNet Repeater or a Fiber Optic Receiver as required; one transmitter can connect to one receiver	
4009-9810	Fiber Optic Receiver		Class B
4009-9811			Class A (IDNet), Class X (fiber)
4009-9805	Red Appliqué for door	Select if required	
2975-9801	Semi-Flush Trim Kit	Beige trim	
2975-9802		Red trim	
		1-7/16" wide (78 mm), use if required for semi-flush installations	


Battery Selection (select battery size per system requirements)

Model	Description	Comments
2081-9272	6.2 Ah Battery, 12 VDC	Two batteries are required, 24 VDC operation
2081-9274	10 Ah Battery, 12 VDC	
2081-9288	12.7 Ah Battery, 12 VDC	
2081-9275	18 Ah Battery, 12 VDC	Requires external battery cabinet, two batteries are required, 24 VDC operation

External Accessories (select per system requirements)


Model	Description	Comments
4090-9105	IDNet Fiber Optic Transmitter	Class B operation
4090-9107		Class X operation
4009-9801	External battery cabinet for up to 18 Ah batteries, beige	16-1/4" W x 13-1/2" H x 5-3/4" D (413 mm x 343 mm x 146 mm)
4081 Series	End-of-Line Resistor Harnesses; see data sheet S4081-0003 for details	

Typical IDNet Connection Example

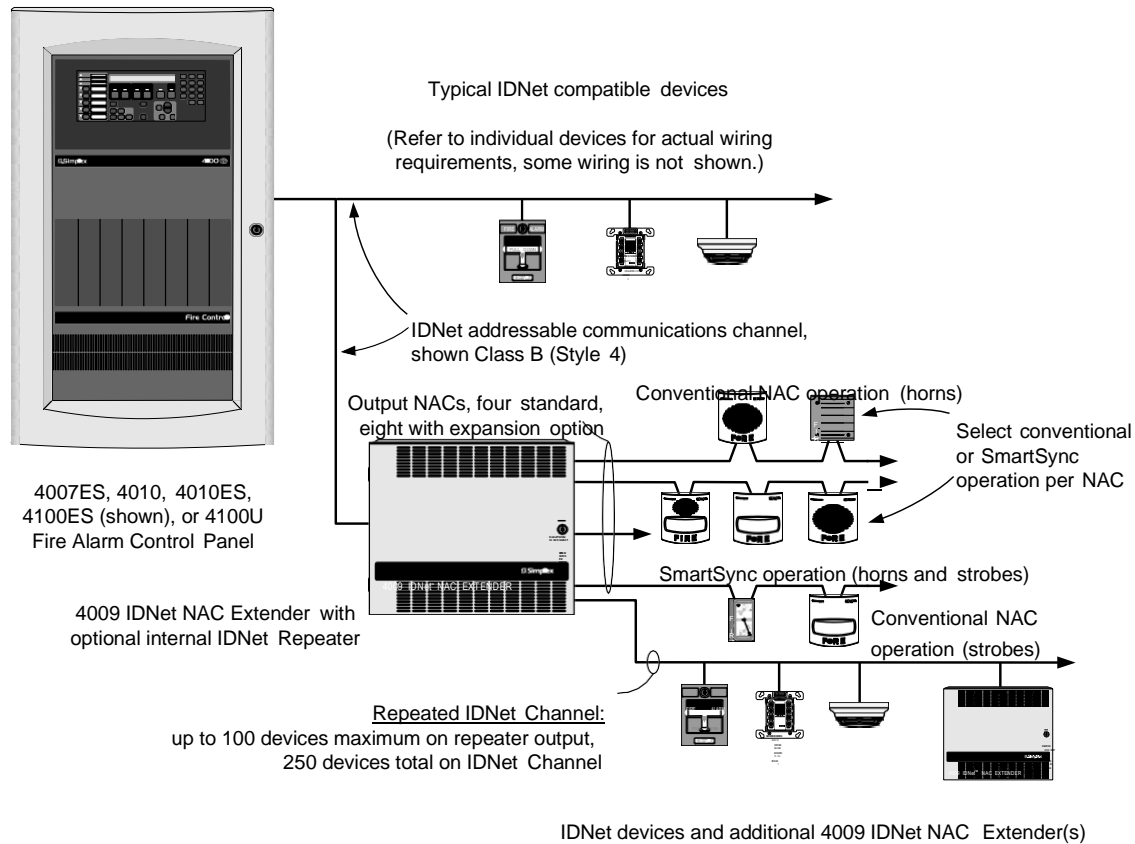

NOTE: Up to ten (10) 4009 IDNet NAC Extenders may be connected per 4007ES, 4010ES, 4100ES, or 4100U IDNet channel, up to five (5) on the 4010 IDNet channel. IDNet communications can be repeated only once (can pass through only one series connected repeater or one fiber optic receiver).

Typical Fiber Optic System Connections

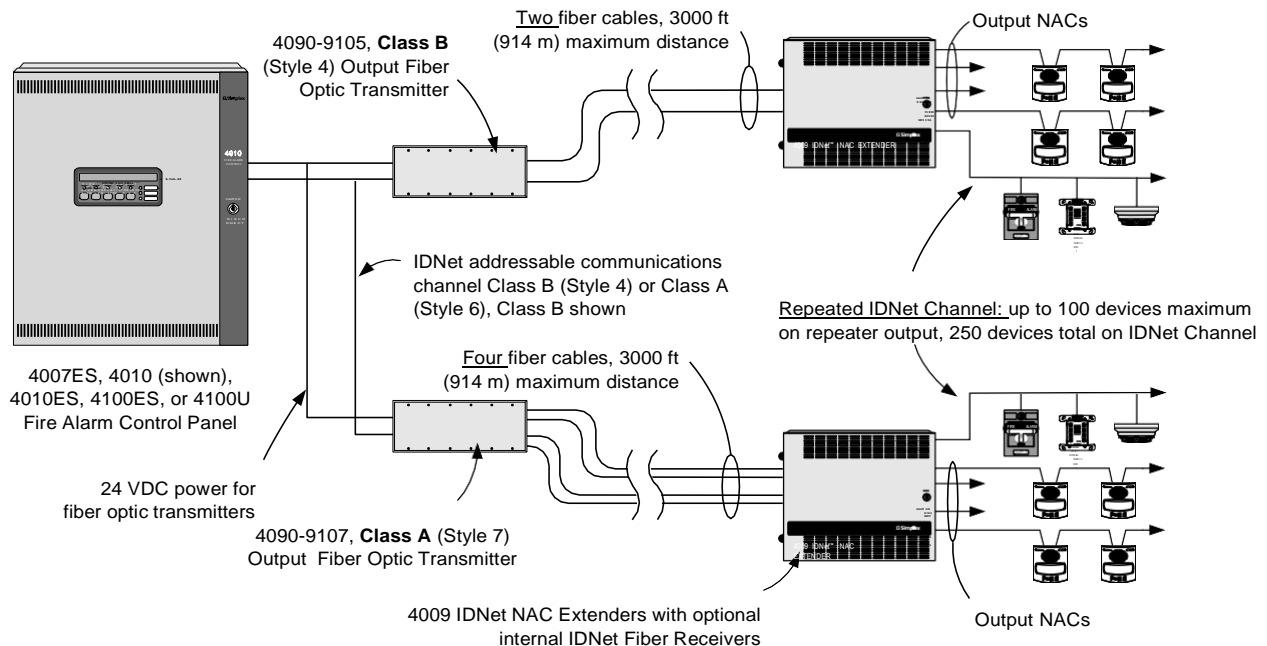

NOTE: Up to ten (10) 4009 IDNet NAC Extenders may be connected per 4007ES, 4010ES, 4100ES, or 4100U IDNet channel, up to five (5) on the 4010 IDNet channel. IDNet communications can be repeated only once (can pass through only one series connected repeater or one fiber optic receiver). Fiber optic transmitters connect

to only one receiver in a 4009 IDNet NAC Extender.

Hardwire Control Connection Information

NAC Input Selections. The 4009 IDNet NAC Extender can be selected to:

- Track input NAC operation **or** to provide a locally generated code, selectable per NAC input
- If selected for local coding, NAC outputs can be either **Temporal Coded** or **60 Beats/min March Time Coded**, one code selection per extender (input NACs must be on continuous with Alarm)
- Additionally, NAC outputs can be selected to provide the Simplex strobe synchronization signal. This signal will synchronize the flashes of synchronized strobes but will be ignored by free-run strobes and audible devices. (Strobes are for operation by noncoded NACs.)

NAC input to NAC output control can be selected for standard and optional NACs per the following table:

Conventional NAC Output Operation Options

Input	A	B	C
NAC 1	NACs 1 & 2, 5 & 6	NACs 1-4	NACs 1-8
NAC 2	NACs 3 & 4, 7 & 8	NACs 5-8	None

SmartSync NAC Output Operation


Input	NAC Control Function
NAC 1	Strobe Control
NAC 2	Horn Control
All NAC outputs (1-8)	

SmartSync Notification Appliance Control

The TrueAlert Notification Appliance product line includes addressable and non-addressable operation. Non-addressable models are available with 2-wire SmartSync operation or conventional 4-wire operation. The following details apply to use with the 4009 IDNet NAC Extender:

- TrueAlert non-addressable models with SmartSync operation allow audible notification to be separately controlled over the same wire pair that controls visible notification
- 4009 IDNet NAC Extenders can be selected to provide SmartSync operation whether controlled by IDNet communications or conventional NACs
- IDNet control allows output NACs to be **individually selected** for conventional **or** SmartSync operation
- With NAC input control, **all** output NACs are selected for either conventional **or** SmartSync operation
- Refer to data sheet S4009-0003 for TrueAlert Addressable operation details, contact your local Simplex product supplier for further information on specific TrueAlert notification appliances

Hardwire Control NAC Connection One-Line Reference Diagram

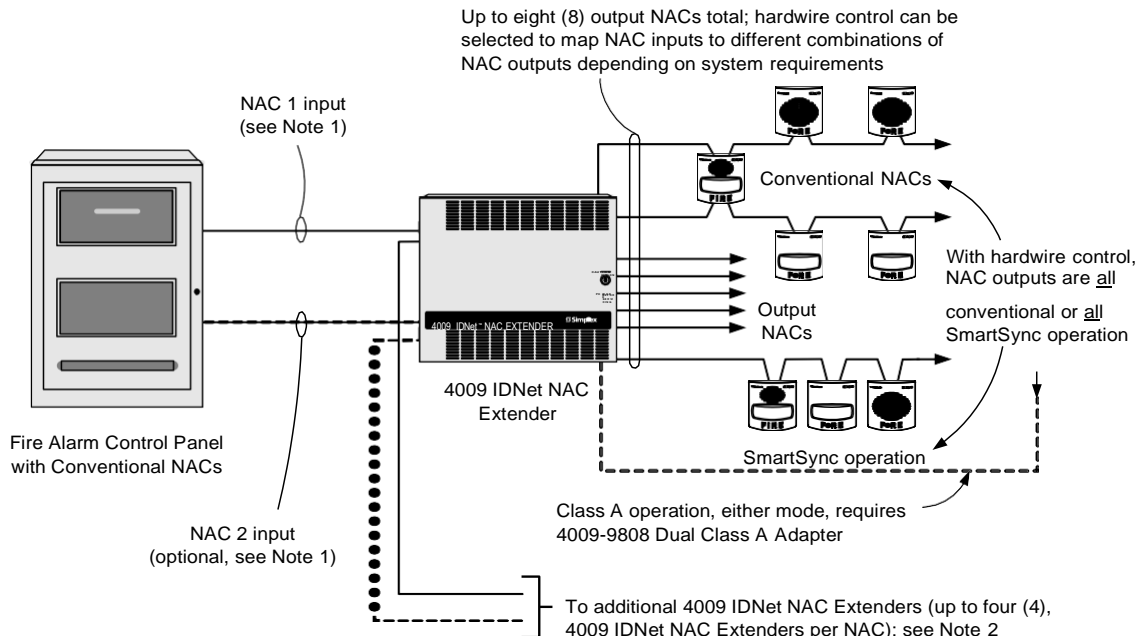

Notes:

1. For separate audible and visible output NAC control, or SmartSync NAC output operation, two (2) input NACs are required. NAC 1 is "on-until-reset" and NAC 2 is "on-until-silenced."
2. To synchronize strobe flash outputs for up to four (4) 4009 IDNet NAC Extenders, use the synchronized strobe output from a Synchronized Flash Module (4905-9914 for Class B operation, 4905-9922 for Class A operation) or, if available, from a NAC selected to provide synchronized strobe flash output. **NOTE: DO NOT USE a NAC selected for SmartSync operation for this function.**

Refer to Installation Instructions 574-181 for additional information and application guidance

4009 IDNet NAC Extender Specifications

Input Ratings	120 VAC Input (4009-9201)	3A @ 102-132 VAC, 60 Hz
	240 VAC Input (4009-9301)	1.5A @ 204-264 VAC, 50/60 Hz
	Hardwire Control from External NACs, Input Requirements	Conventional reverse polarity operation 5 mA maximum; 16 to 33 VDC
Output Ratings	Total Rating	8 A, Special Application appliances 6 A, Regulated 24 DC appliance power
	Standard NACs	2 A each, Special Application or Regulated 24 DC appliance power
	Optional NACs (requires 4009-9807)	1.5 A each, Special Application appliances 1 A each, Regulated 24 DC appliance power
	Special Application Appliances	Simplex non-addressable horns, strobes, and combination horn/strobes and speaker/strobes (contact your Simplex product representative for compatible appliances)
	Regulated 24 DC Appliances	Power for other UL listed appliances; use associated external synchronization modules where required
	Strobe Operation	Up to 33 strobes per NAC can be synchronized; output NACs configured for Simplex synchronized strobe operation are synchronized to each other
	Auxiliary Output	500 mA @ 24 VDC nominal

Optional Modules Ratings

IDNet Repeater Module (4009-9809)	Input Power	70 mA @ 24 VDC, system supplied
	IDNet Input, One Address	Maximum distance from IDNet source is 2500 ft (762 m)
	IDNet Output Specifications	Repeated IDNet output for up to 100 devices (total IDNet devices not to exceed 250 per channel)
		Maximum distance to farthest device is 2500 ft (762 m)
		Total distance including "T-taps" is 10,000 ft (3048 m)
	Class A loop maximum distance is 2500 ft (762 m), no "T" taps	

Fiber Optic Receiver Modules

Input Current	4009-9810, Class B, 65 mA @ 24 VDC, system supplied 4009-9811, Class X, 80 mA @ 24 VDC, system supplied
IDNet Output Specifications	Same as those for Repeater Module (see above)
Fiber Optic Transmission Distance	3000 ft (914 m) maximum

General (LED status indicators are listed on page 7, dimensions and mounting details are on page 6)


Operating Temperature	32° to 120° F (0° to 49° C)
Operating Humidity Range	10% to 90% RH from 32° F to 104° F (0° C to 40° C)
Wiring Connections*	Terminal blocks for 18 AWG (stranded) to 12 AWG (solid)

Fiber Optic Transmitter Specification

Input Voltage	18.9-32 VDC from compatible listed fire alarm supply
Input Current	4090-9105, Class B, 30 mA @ 24VDC 4090-9107, Class X, 35 mA @ 24VDC
Fiber Optic Connections and cable requirements	Multimode, graded index, 50/125µm, 62.5/125 µm, 100/40 µm, or 200 µm
	Type ST connectors
	4090-9105, Class B operation, two fiber cables required 4090-9107, Class X operation, four fiber cables required
Module Size (with mounting bracket)	6-13/16" W x 3-3/4" H x 1-1/8" D (173 mm x 95 mm x 29 mm)
On-board Status Indicators	Green LED flashing = transmit
	Red LED flashing = receive
	Separate red LED on 4090-9107 = Class X receive
Communications	Simplex IDNet
Fiber Optic Transmission Distance	3000 ft (914 m) maximum
Wiring Connections*	Terminal blocks for 18 AWG (stranded) to 12 AWG (solid)
Operating Humidity	10% to 90% RH from 32° to 104° F (0° to 40° C)
Operating Temperature	32° F to 120° F (0° to 49° C)


* Metric wire equivalents: 18 AWG = 0.82 mm²; 12 AWG = 3.31 mm²

4009 IDNet NAC Extender Mounting and Module Placement Information

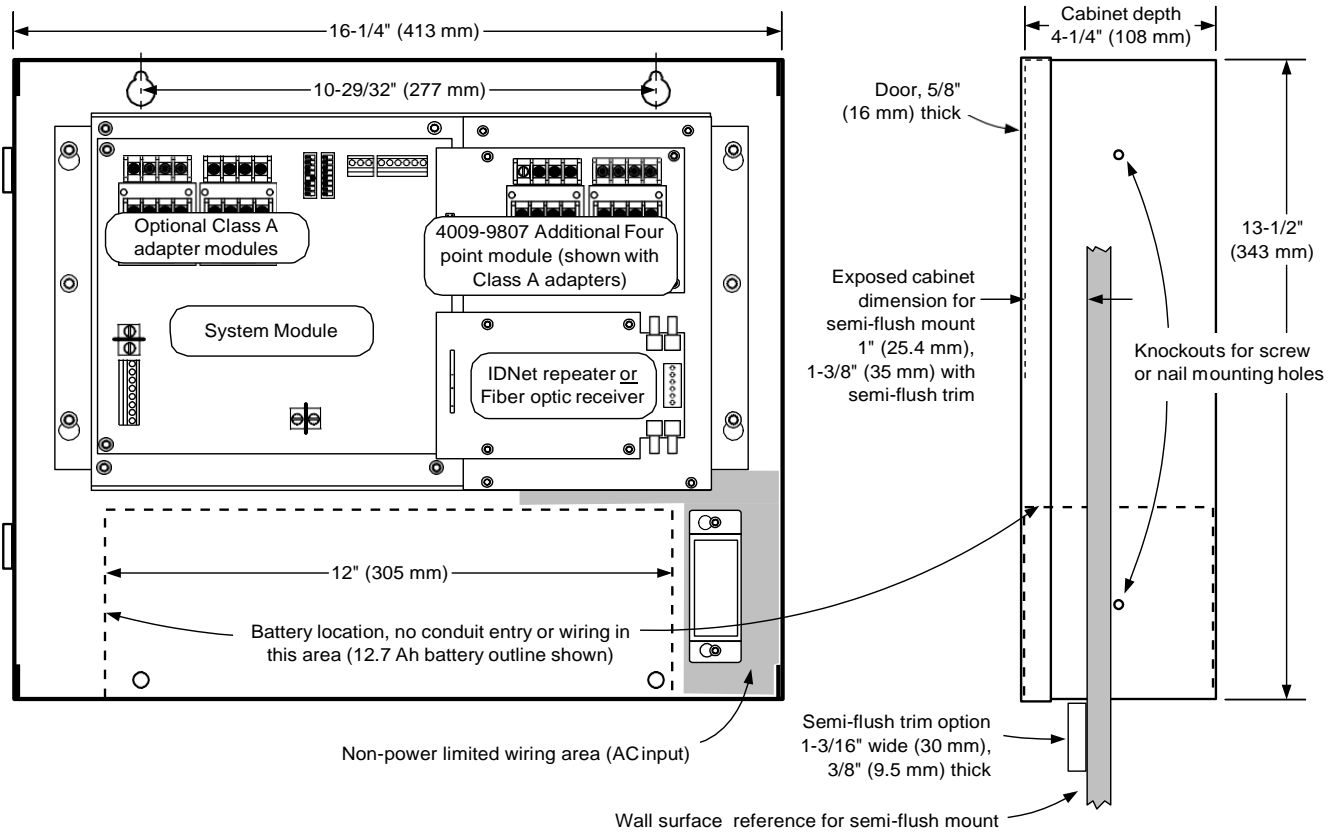


NOTE: Recommended conduit entrance varies with module selection. Refer to general installation instructions 574-181, specific module installation instructions, and to field wiring diagrams 842-068 before locating conduit entrance.

4009 IDNet NAC Extender Cabinet with Door Detail

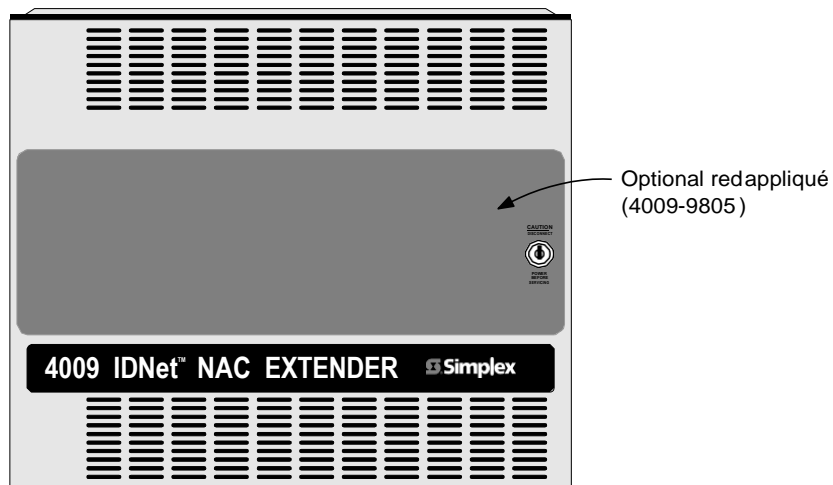

4090-9105/9107 IDNet Fiber Optic Transmitter Mounting Information

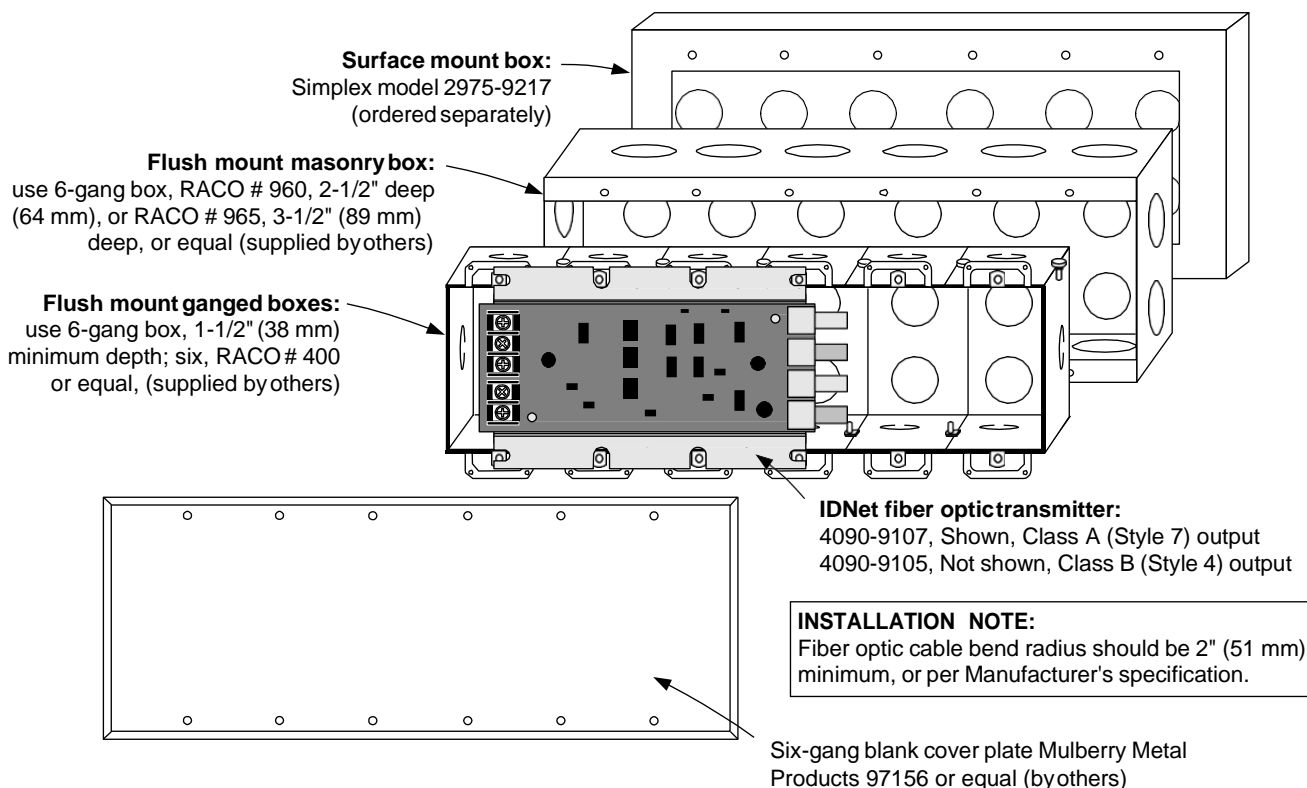

Service Diagnostic Features

Power-up Self-Diagnostics. Upon power-up, the 4009 IDNet NAC Extender tests each module and performs earth fault diagnostics. Trouble conditions are communicated to the host control panel and are also displayed on diagnostic status LEDs in the 4009 IDNet NAC Extender. When connected via IDNet communications, detailed status information is available at the host. When controlled with conventional NAC inputs, common troubles are signaled by providing a polarized open circuit that disconnects the NAC wiring from its end-of-line resistor but still allows a reversed polarity alarm to be received.

Door Mounted Reference Label. The 4009 IDNet NAC Extender has a detailed programming and diagnostic label inside the front door that provides a quick reference for both installation and checkout.

LED Status Indicators are provided for the following:

- **Each NAC** (standard and optional) has a dedicated yellow LED that:
 - During supervision provides a slow flash to indicate a short circuit condition and a fast flash to indicate an open circuit
 - During an alarm, the LED follows the NAC output (on steady or flashing with coded output)
- **Four, general status yellow LEDs** provide nine separate indications listed in priority of urgency. As a trouble is eliminated, any remaining trouble(s) will then be indicated until the 4009 IDNet NAC Extender is returned to normal operation.
- **AC power status** is indicated by a green LED that is on when AC is normal. During low AC (brownout) conditions or with no AC, the LED is off. Additional power and battery status is indicated by the general status LEDs.

4009 IDNet NAC Extender Current Calculation Char

Step 1. Calculate Basic Extender Battery Requirements (minus NAC loads)

Panel, NAC Options, and Auxiliary Power (underlined model numbers are optional modules)

Model	Description	Supervisory Current	Actual Supervisory	Alarm Current	Actual Alarm
4009-9201	120 VAC input	85 mA	85 mA	185 mA	185 mA
4009-9301	240 VAC input				
<u>4009-9807</u>	Additional Four Point NAC	40 mA	+ _____	40 mA	+ _____
<u>4009-9808</u>	Dual Class A Adapter (no additional current)	-	-	-	-
Auxiliary Power Output		(500 mA maximum)	+ _____	(500 mA maximum)	+ [A1] _____
Basic Panel Supervisory Current			= [S1] _____		
Basic Panel Alarm Current			= [A2] _____		

Step 2. Calculate IDNet Output Module and Device Current (if used)

4009-9809	IDNet Repeater	Select <u>one</u> per Extender	70 mA	+ _____	70 mA	+ _____
4009-9810*	Fiber Optic Receiver, Class B		65 mA		65 mA	
4009-9811*	Fiber Optic Receiver, Class X		80 mA		80 mA	
IDNet Devices (connected to Repeater or Receiver above), 0.7 mA each, maximum of 100		Total devices x 0.7 mA each	+ _____	Total devices x 0.7 mA each	+ _____	
* Note: IDNet Fiber Optic Transmitter current is supplied from the host fire alarm control panel		IDNet Module Supervisory Current	[S2] = _____	IDNet Module Alarm Current	= [A3] _____	
		Maximum Available Current	= 8 A*			

Step 2. Calculate Available NAC Current

Subtract Auxiliary Power Output - [A1] _____

Subtract IDNet Module Current - [A3] _____

* 8 A for Special Application Appliances; 6 A for Regulated 24 DC Appliances

Available NAC Current = [A4] _____

Step 3. Calculate Actual NAC Loading (Limited to Available NAC Current per Step 2.)

NAC Type	NAC Circuit #	NAC Alarm Current
Standard Panel NACS, <u>2 A maximum</u> per NAC	Circuit 1	+ _____
	Circuit 2	+ _____
	Circuit 3	+ _____
	Circuit 4	+ _____
Optional Four Point NAC Module, <u>1.5 A maximum</u> Special Application rating, <u>1 A maximum</u> Regulated 24 DC rating, per NAC	Circuit 5	+ _____
	Circuit 6	+ _____
	Circuit 7	+ _____
	Circuit 8	+ _____
Total Actual NAC Load Alarm Current		= [A5] _____

Step 4. Calculate Total Supervisory Current

Total Supervisory Current = Basic Panel Current [S1] + IDNet Module Current [S2] = _____

Step 5. Calculate Total Alarm Current

Total Alarm Current = Basic Panel Current [A2] + IDNet Module Current [A3] + Actual NAC Current [A5] = _____

TYCO, SIMPLEX, and the product names listed in this material are marks and/or registered marks. Unauthorized use is strictly prohibited.



Tyco Fire Protection Products • Westminster, MA • 01441-0001 • USA

S4009-0002-12 11/2014

www.simplex-fire.com

© 2014 Tyco Fire Protection Products. All rights reserved. All specifications and other information shown were current as of document revision date and are subject to change without notice.

Feature

TrueAlarm analog sensing provides:

- Digital transmission of analog sensor values via IDNet or MAPNET II two-wire communications

For use with the following Simplex® products:

- 4007ES, 4010, 4010ES, 4100ES, and 4100U Series control panels; and 4008 Series control panels with reduced feature set (refer to data sheet S4008-0001 for details)
- 4020, 4100, and 4120 Series control panels, Universal Transponders, and 2120 TrueAlarm CDTs equipped for MAPNET II operation

Fire alarm control panel provides:

- Peak value logging allowing accurate analysis of each sensor for individual sensitivity selection
- Sensitivity monitoring satisfying NFPA 72 sensitivity testing requirements; automatic individual sensor calibration check verifies sensor integrity
- Automatic environmental compensation, multi-stage alarm operation, and display of sensitivity directly in percent per foot
- Ability to display and print detailed sensor information in plain English language

Photoelectric smoke sensors provide:

- Seven levels of sensitivity from 0.2% to 3.7% (refer to additional information on page 3)

Heat sensors provide:

- Fixed temperature sensing
- Rate-of-rise temperature sensing
- Utility temperature sensing
- Listed to UL 521 and ULC-S530


General features:

- Operation is for ceiling or wall mounting
- Listed to UL 268 and ULC-S529
- Louvered smoke sensor design enhances smoke capture by directing flow to chamber; entrance areas are minimally visible when ceiling mounted
- Designed for EMI compatibility
- Magnetic test feature is provided
- Different bases are available to support a supervised or unsupervised output relay, and/or a remote LED alarm indicator

Additional base reference:

- For isolator bases, refer to data sheet S4098-0025
- For sounder bases, refer to data sheet S4098-0028
- For photo/heat sensors, refer to data sheet S4098-0024 (single address) and S4098-0033 (dual address)

* These products have been approved by the California State Fire Marshal (CSFM) pursuant to Section 13144.1 of the California Health and Safety Code. See CSFM Listings 7272-0026:218, 7271-0026:231, 7270-0026:216, and 7300-0026:217 for allowable values and/or conditions concerning material presented in this document. Accepted for use – City of New York Department of Buildings – MEA35-93E. Additional listings may be applicable, contact your local Simplex product supplier for the latest status. Listings and approvals under Simplex Time Recorder Co. are the property of Tyco Fire Protection Products.

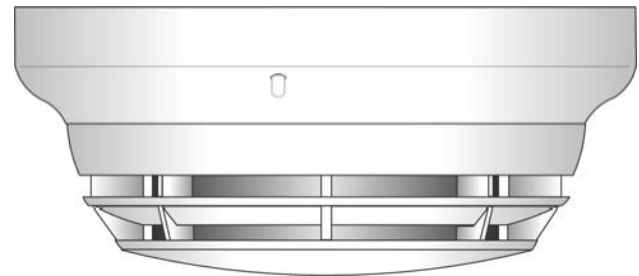

4098-9714 TrueAlarm Photoelectric
Sensor Mounted in Base

Description

Digital Communication of Analog Sensing.

TrueAlarm analog sensors provide an analog measurement digitally communicated to the host control panel using Simplex addressable communications. At the control panel, the data is analyzed and an average value is determined and stored. An alarm or other abnormal condition is determined by comparing the sensor's present value against its average value and time.

Intelligent Data Evaluation. Monitoring each sensor's average value provides a continuously shifting reference point. This software filtering process compensates for environmental factors (dust, dirt, etc.) and component aging, providing an accurate reference for evaluating new activity. With this filtering, there is a significant reduction in the probability of false or nuisance alarms caused by shifts in sensitivity, either up or down.

Control Panel Selection. Peak activity per sensor is stored to assist in evaluating specific locations. The alarm set point for each TrueAlarm sensor is determined at the host control panel, selectable as more or less sensitive as the individual application requires.

Timed/Multi-Stage Selection. Sensor alarm set points can be programmed for timed automatic sensitivity selection (such as more sensitive at night, less sensitive during day). Control panel programming can also provide multi-stage operation per sensor. For example, a 0.2% level may cause a warning to prompt investigation while a 2.5% level may initiate an alarm.

Sensor Alarm and Trouble LED Indication. Each sensor base's LED pulses to indicate communications with the panel. If the control panel determines a sensor is in alarm, or is dirty or has some other type of trouble, the details are annunciated at the control panel and that sensor base's LED will be turned on steadily. During a system alarm, the control panel will control the LEDs such that an LED indicating a trouble will return to pulsing to help identify the alarmed sensors.

TrueAlarm Sensor Bases and Accessories

Sensor Base Features

Base mounted address selection:

- Address remains with its programmed location
- Accessible from front (DIP switch under sensor)

General features:

- Automatic identification provides default sensitivity when substituting sensor types
- Integral red LED for power-on (pulsing), or alarm or trouble (steady on)
- Locking anti-tamper design mounts on standard outlet box
- Magnetically operated functional test

Sensor Bases

4098-9792, Standard Sensor Base

4098-9789, Sensor Base with wired connections for:

- 2098-9808 Remote LED alarm indicator or 4098-9822 relay (relay is unsupervised and requires separate 24 VDC)

Supervised Relay Bases (not compatible with 2120 CDT):

- **4098-9791, 4-Wire Sensor Base**, use with remote or locally mounted 2098-9737 relay, requires separate 24 VDC
- **4098-9780, 2-Wire Sensor Base**, use with remote or locally mounted 4098-9860 relay, no separate power required
- Supervised relay operation is programmable and can be manually operated from control panel
- Includes wired connections for remote LED alarm indicator or 4098-9822 relay (relay is unsupervised and requires separate 24 VDC)

Sensor Base Options

2098-9737, Remote or local mount supervised relay:

- DPDT contacts for resistive/suppressed loads, power limited rating of 3 A @ 28 VDC; non-power limited rating of 3 A @ 120 VAC (requires external 24 VDC coil power)

4098-9860, Remote or local mount supervised relay:

- SPDT dry contacts, power limited rating of 2 A @ 30 VDC, resistive; non-power limited rating of 0.5 A @ 125 VAC, resistive

4098-9822, LED Annunciation Relay:

- Activates when base LED is on steady, indicating local alarm or trouble
- DPDT contacts for resistive/suppressed loads, power limited rating of 2 A @ 28 VDC; non-power limited rating of 1/2 A @ 120 VAC, (requires external 24 VDC coil power)

4098-9832, Adapter plate:

- Required for surface or semi-flush mounting to 4" square electrical box and for surface mounting to 4" octagonal box
- Can be used for cosmetic retrofitting to existing 6-3/8" diameter base product

2098-9808, Remote red LED Alarm Indicator:

- Mounts on single gang box (shown in illustration to right)



Descriptio

TrueAlarm sensor bases contain integral addressable electronics that constantly monitor the status of the detachable photoelectric or heat sensors. Each sensor's output is digitized and transmitted to the system fire alarm control panel every four seconds.


Since TrueAlarm sensors use the same base, different sensor types can be easily interchanged to meet specific location requirements. This feature also allows intentional sensor substitution during building construction. When conditions are temporarily dusty, instead of covering the smoke sensors (causing them to be disabled), heat sensors may be installed without reprogramming the control panel. Although the control panel will indicate an incorrect sensor type, the heat sensor will operate at a default sensitivity providing heat detection for building protection at that location.

Mounting Reference

Electrical Box Requirements: (boxes are by others)


Without relay in the box: 4" octagonal or 4" square, 1-1/2" deep; single gang, 2" deep

With relay in the box: 4" octagonal or 4" square, 1-1/2" deep, with 1-1/2" extension ring

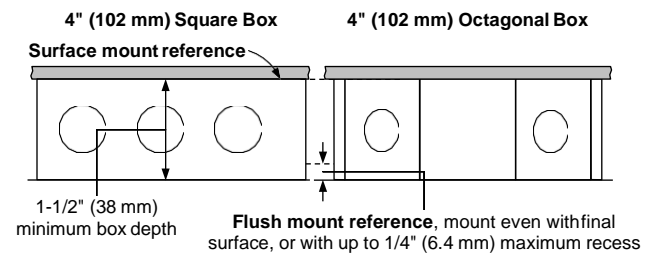


2098-9737 Supervised Relay (mounts in base electrical box or remotely)

4098-9822 Relay (mounts in base electrical box)

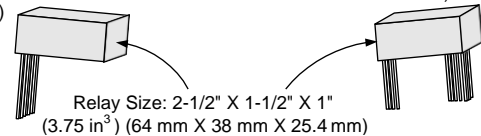


Relay Size: 2-1/2" X 1-1/2" X 1"
(3.75 in³) (64 mm X 38 mm X 25.4 mm)

4098-9860 Supervised Relay (mounts in base electrical box or remotely; 2-3/8" X 1-1/4" X 11/32"
(1 in³) (60.4 mm X 31.8 mm X 8.6 mm)



NOTE: Review total wire count, wire size, and accessories being wired to determine required box volume.

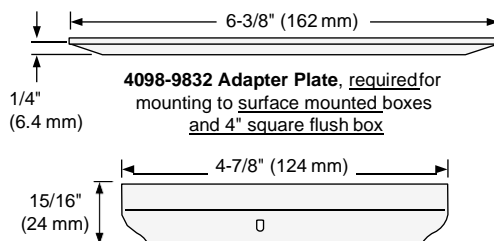

TrueAlarm Bases
4098-9780, 4098-9789, 4098-9791, & 4098-9792

TrueAlarm Sensors

Feature

Sealed against rear air flow entry

Interchangeable mounting

EMI/RFI shielded electronics

Heat sensors:

- Selectable rate compensated, fixed temperature sensing with or without rate-of-rise operation
- Rated spacing distance between sensors:

Fixed Temp. Setting	UL & ULC Spacing	FM Spacing, Either Fixed Temperature Setting
135° F (57.2° C)	60 ft x 60 ft (18.3 m)	20 ft x 20 ft (6.1 m) for fixed temperature only; RTI = Quick
155° F (68° C)	40 ft x 40 ft (12.2 m)	50 ft x 50 ft (15.2 m) for fixed temperature with either rate-of-rise selection; RTI = Ultra Fast


Smoke Sensors:

- Photoelectric technology sensing
- 360° smoke entry for optimum response
- Built-in insect screens

4098-9714 Photoelectric Sensor

TrueAlarm photoelectric sensors use a stable, pulsed infrared LED light source and a silicon photodiode receiver to provide consistent and accurate low power smoke sensing. Seven levels of sensitivity are available for each individual sensor, ranging from 0.2% to 3.7% per foot of smoke obscuration. Sensitivities of 0.2%, 0.5%, and 1% are for special applications in clean areas. Standard sensitivities are 1.5%, 2.0%, 2.5%, 3.0%, and 3.7%. Application type and sensitivity are selected and then monitored at the fire alarm control panel.*

The sensor head design provides 360° smoke entry for optimum response to smoke from any direction. Due to its photoelectric operation, air velocity is not normally a factor, except for impact on area smoke flow.

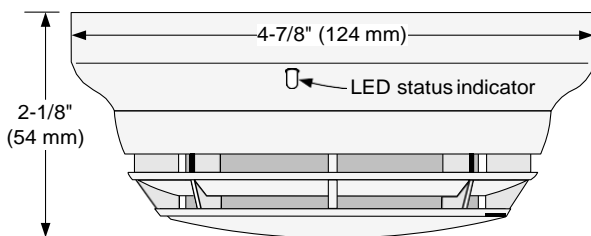


4098-9714 Photoelectric Sensor with Base

4098-9733 Heat Sensor

TrueAlarm heat sensors are self-restoring and provide rate compensated, fixed temperature sensing, selectable with or without rate-of-rise temperature sensing. Due to its small thermal mass, the sensor accurately and quickly measures the local temperature for analysis at the fire alarm control panel.

Rate-of-rise temperature detection is selectable at the control panel for either 15° F (8.3° C) or 20° F (11.1° C) per minute. Fixed temperature sensing is independent of rate-of-rise sensing and programmable to operate at 135° F (57.2° C) or 155° F (68° C). In a slow developing fire, the temperature may not increase rapidly enough to operate the rate-of-rise feature. However, an alarm will be initiated when the temperature reaches its rated fixed temperature setting.

TrueAlarm heat sensors can be programmed as a utility device to monitor for temperature extremes in the range from 32° F to 155° F (0° C to 68° C). This feature can provide freeze warnings or alert to HVAC system problems. *Refer to specific panels for availability.*

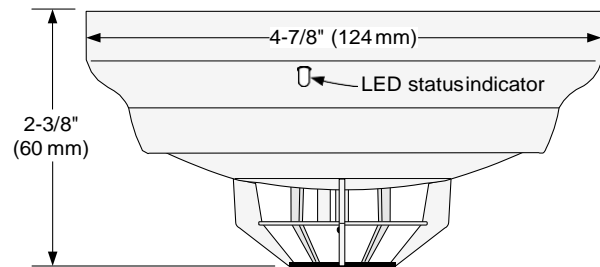

4098-9733 Heat Sensor with Base

WARNING: In most fires, hazardous levels of smoke and toxic gas can build up before a heat detection device would initiate an alarm. In cases where Life Safety is a factor, the use of smoke detection is highly recommended.

Application Referenc

Sensor locations should be determined only after careful consideration of the physical layout and contents of the area to be protected. Refer to NFPA 72, the *National Fire Alarm and Signaling Code*. On smooth ceilings, smoke sensor spacing of 30 ft (9.1 m) may be used as a guide.*

* For detailed application information including sensitivity selection, refer to Installation Instructions 574-709.

TrueAlarm Analog Sensing Product Selection Chart

TrueAlarm Sensor Bases (for use with Sensors 4098-9714 and 4098-9733)

(Refer to Application Manual 574-709 and Installation Instructions 574-707 for additional information)

Model	Description	Compatibility	Mounting Requirements
4098-9792	Standard Sensor Base	No options	4" octagonal or 4" square box, 1-1/2" min. depth; or single gang box, 2" min. depth
4098-9789	Sensor Base with connections for Remote LED Alarm Indicator or Unsupervised Relay	2098-9808 Remote Alarm Indicator or 4098-9822 Unsupervised Relay	4" octagonal or 4" square box
4098-9791**	4-Wire Sensor Supervised Relay Base with connections for LED Indicator or Unsupervised Relay	2098-9737 Supervised Remote Relay 2098-9808 Remote Alarm Indicator or 4098-9822 Unsupervised Relay	Note: Box depth requirements depend on total wire count and wire size, refer to accessories list below for reference.
4098-9780**	2-Wire Sensor Supervised Relay Base with connections for LED Indicator or Unsupervised Relay	4098-9860 Supervised Remote Relay 2098-9808 Remote Alarm Indicator or 4098-9822 Unsupervised Relay	** NOTE: 4098-9791 and 4098-9780 are NOT compatible with the 2120 CDT

TrueAlarm Sensors

Model	Description	Compatibility	Mounting Requirements
4098-9714	Photoelectric Smoke Sensor	Bases 4098-9792, 4098-9789, 4098-9791, and 4098-9780	Refer to base requirements
4098-9733	Heat Sensor		

TrueAlarm Sensor/Base Accessories

Model	Description	Compatibility	Mounting Requirements
2098-9737	Supervised Relay, mounts remote or in base electrical box	For use with 4098- 9791 base	Remote Mounting requires 4" octagonal or 4" square box, 1-1/2" minimum depth
4098-9860	Supervised Relay, mounts remote or in base electrical box	For use with 4098- <u>9780</u> base	Base Mounting requires 4" octagonal box, 2-1/8" deep with 1-1/2" extension ring
2098-9808	Remote Red LED Alarm Indicator on single gang stainless steel plate	Bases 4098-9789, 4098-9791, and 4098-9780	Single gang box, 1-1/2" minimum depth
4098-9822	Unsupervised Relay, tracks base LED status; Note: Mounts only in base electrical box	Bases 4098-9789, 4098-9791, and 4098-9780	4" octagonal box, 2-1/8" deep with 1-1/2" extension ring
4098-9832	Adapter Plate	Bases 4098-9792, 4098-9789, 4098-9791, and 4098-9780	Required for surface or semi-flush mounted 4" square box and for surface mounted 4" octagonal box

Specifications

General Operating Specifications

Communications and Sensor Supervisory Power	IDNet or MAPNET II communications, auto-selected, 1 address per base
Communications Connections	Screw terminals for in/out wiring, 18 to 14 AWG (0.82 mm ² to 2.08 mm ²)
Remote LED Alarm Indicator Current	1 mA typical, no impact to alarm current
Remote LED Alarm Indicator and Relay Connections	Color coded wire leads, 18 AWG (0.82 mm ²)
UL Listed Operating Temperature Range	32° to 100° F (0° to 38° C)
Operating Temperature Range	with 4098-9733 Heat Sensor 32° to 122° F (0° to 50° C) with 4098-9714 Smoke Sensor 15° to 122° F (-9° to 50° C)
Storage Temperature Range	0° F to 140° F (-18° C to 60° C)
Humidity Range	10 to 95% RH
4098-9714 Smoke Sensor Air Velocity Rating	0-4000 ft/min (0-1220 m/min)
Housing Color	Frost White

4098-9791 Base With Supervised Remote Relay 2098-9737 (see page 2 for contact ratings)

Externally Supplied Relay Coil Voltage	18-32 VDC (nominal 24 VDC)
Supervisory Current	270 µA, from 24 VDC supply
Alarm Current with 2098-9737 Relay	28 mA, from 24 VDC supply

4098-9780 Base With Supervised Remote Relay 4098-9860 (see page 2 for contact ratings)

Power	Supplied from communications
-------	------------------------------

4098-9822 Unsupervised Relay, Requirements for Bases 4098-9789, 4098-9791, and 4098-9780 (see page 2 for contact ratings)

Externally Supplied Relay Coil Voltage	18-32 VDC (nominal 24 VDC)
Supervisory Current	Supplied from communications
Alarm Current	13 mA from separate 24 VDC supply

TYCO, SIMPLEX, and the product names listed in this material are marks and/or registered marks. Unauthorized use is strictly prohibited. NFPA 72 and National Fire Alarm and Signaling Code are trademarks of the National Fire Protection Association (NFPA).



Tyco Fire Protection Products • Westminster, MA • 01441-0001 • USA

S4098-0019-20 1/2015

www.simplex-fire.com

© 2015 Tyco Fire Protection Products. All rights reserved. All specifications and other information shown were current as of document revision date and are subject to change without notice.

Feature

MAPNET II ZAMs provide an addressable interface to conventional fire alarm zone circuit devices including:**

- Initiating devices (Monitor ZAM)
- Notification appliance circuits (Signal ZAM)
- Control relays (Control ZAM)

These ZAMs are compatible with the following Simplex® fire alarm control panels when equipped with MAPNET II communications:

- 4100/4100U Series fire alarm control panels
- 4100 Series Universal Transponders
- 4120 Series Network node fire alarm control panels
- 4020 Series fire alarm control panels
- 2120 Communicating Device Transponders

MAPNET II communications can be wired:

- NFPA Style 4/Class B or Style 6/Class A
- Style 4/Class B communications may be wired either “T” tapped or In/Out

Convenient DIP switch address selection

UL listed to Standard 864


Description

MAPNET II zone adapter modules (ZAMs) provide an addressable interface between conventional zone devices and the host fire alarm control panel.


Monitor ZAMs provide status monitoring and supervision of an initiating device circuit (IDC) zone and are used for circuits with non-addressable detectors and for other contact closures such as waterflow and tamper switches or non-addressable manual stations. Different models of Monitor ZAMs are available for two-wire IDCs Class B, or Class A, and for four-wire IDCs with Class B IDC input. Each type required a separate 24 VDC input power from a listed fire alarm power supply.

Signal ZAMs supervise and operate 24 VDC notification appliances, speakers, and telephone circuits. Output capacity is up to 2 A @ 24 VDC, or 50 W of 25 VRMS speakers, or up to three simultaneously activated firefighter phones. The signal ZAM is available for either Style Y/Class B or Style Z/Class A operation for notification appliance circuits.

* This product has been approved by the California State Fire Marshal (CSFM) pursuant to Section 13144.1 of the California Health and Safety Code. See CSFM Listing 7300-0026:182 for allowable values and/or conditions concerning material presented in this document. It is subject to re-examination, revision, and possible cancellation. Additional listings may be applicable, contact your local Simplex product supplier for the latest status. Listings and approvals under Simplex Time Recorder Co. are the property of Tyco Safety Products Westminster.

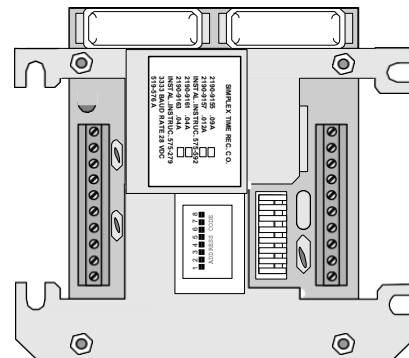

Signal/Control ZAM

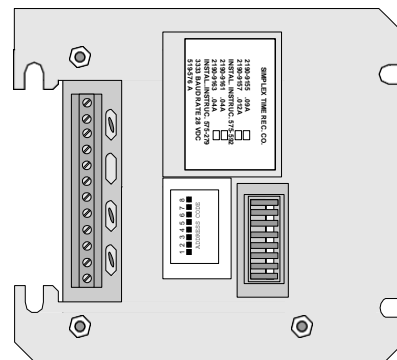

Monitor ZAM

Description (Continued)

Control ZAMs provide addressable control functions such as elevator capture, HVAC control, pressurization fan control, and damper control. The control relay provides a DPDT contact (contact ratings are shown on page 4).

General Specification

Communications	Supplied by MAPNET II, 24 to 40 VDC with data
Power	Separate 24 VDC required from listed fire alarm power supply
Wiring Information	Refer to reference diagrams on pages 3 and 4
Wire Connections	Screw terminals for in/out wiring, 18 to 12 AWG wire
Address Means	DIP switch, 8 position
Temperature Range	32° F to 120° F (0° C to 49° C) intended for indoor operation
Humidity Range	Up to 85% RH at 86° F (30° C)

** MAPNET II addressable communications are protected by U.S. Patent No. 4,796,025.

Product Selection


Zone Adapter Modules, Monitor ZAMs (separate 24VDC power is required)

Model	Cover Type	Description	Supervisory Current	Alarm Current
2190-9153	Surface	Monitor ZAM, Class A (Style D)	20 mA @ 24 VDC	90 mA @ 24 VDC
2190-9154	Flush			
2190-9155	Surface	Monitor ZAM, Class B (Style B)		
2190-9156	Flush			
2190-9157	Surface	4-Wire Detector ZAM, Class B IDC input		
2190-9158	Flush			


Zone Adapter Modules, Signal and Control ZAMs (separate 24 VDC power is required)

Model	Cover Type	Description	Supervisory Current	Alarm Current
2190-9159	Surface	Signal ZAM, Class A (Style Z)	15 mA @ 24 VDC	65 mA @ 24 VDC
2190-9160	Flush			
2190-9161	Surface	Signal ZAM, Class B (Style Y)	15 mA @ 24 VDC	40 mA @ 24 VDC
2190-9162	Flush			
2190-9163	Surface	Control Relay ZAM, DPDT Contacts	10 mA @ 24 VDC	
2190-9164	Flush			


Typical ZAM Mounting

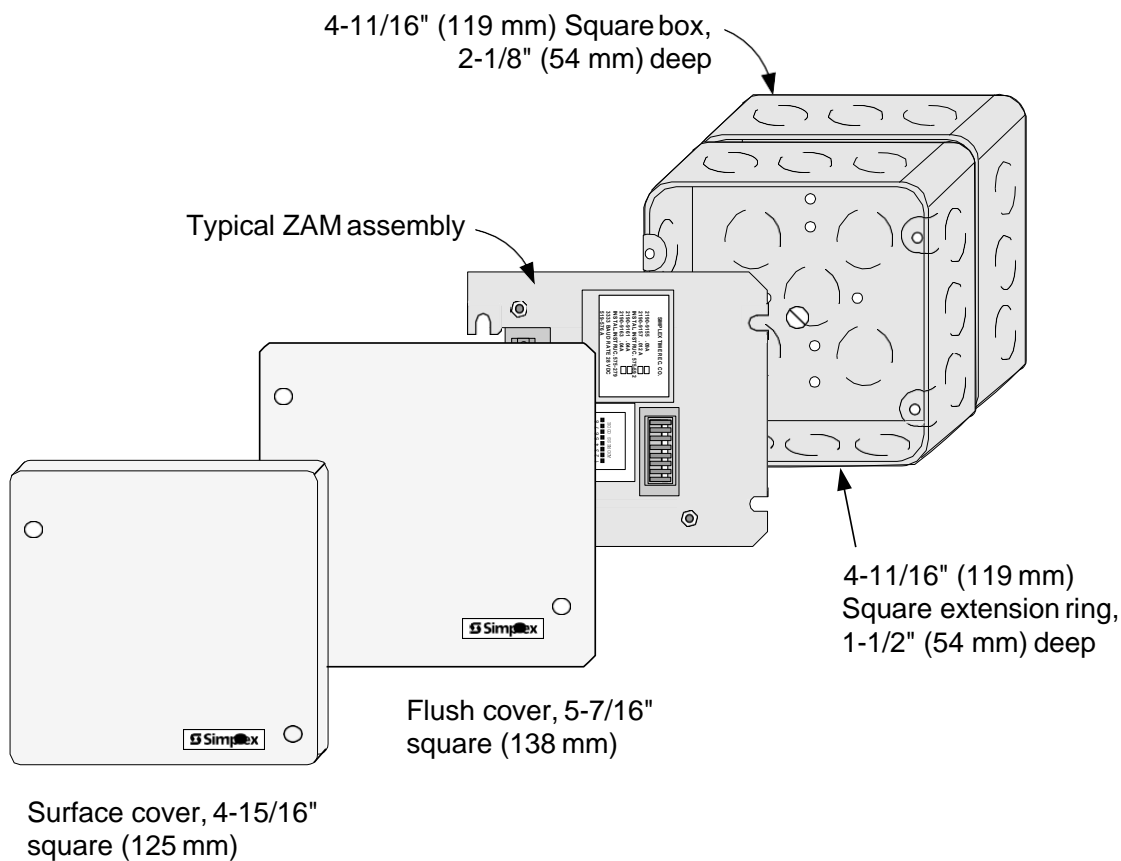


Monitor ZAM Reference Wiring Diagram

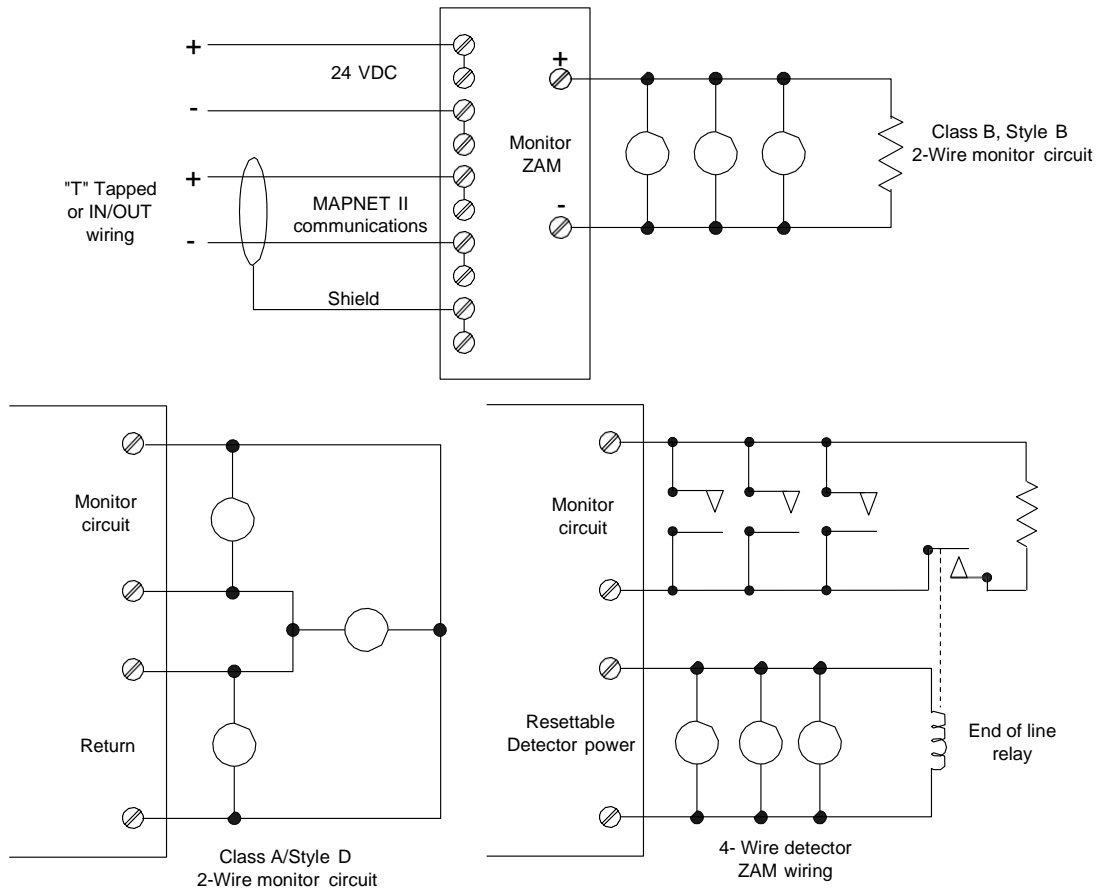

Signal ZAM Wiring Referenc

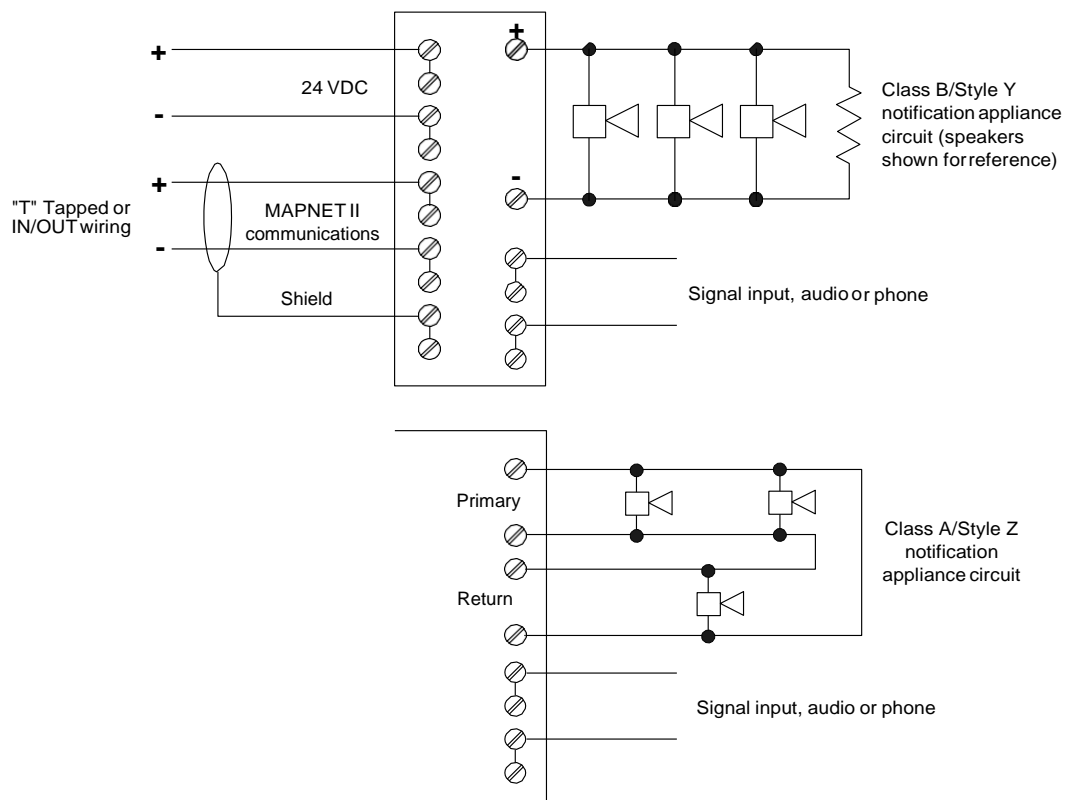

Control ZAM Reference Wiring Diagram

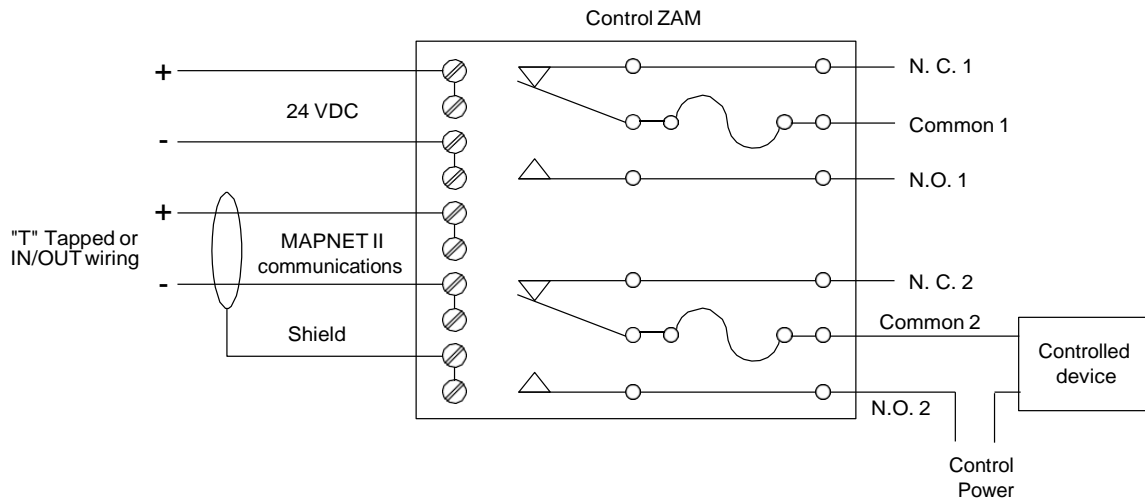

Control ZAM Relay Ratings (DPDT Contacts)

Application	Resistive Rating	Inductive Rating**
Power Limited*	2 A @ 28 VDC	1 A @ 28 VDC
Non-Power Limited	2 A @ 28 VDC	1 A @ 28 VDC
	1/2 A @ 120 VAC	1/2 A @ 120 VAC

* DC Voltage must be from a listed Fire Alarm power supply.

** Inductive loads must be properly suppressed.

Tyco is a registered trademark of Tyco International Services GmbH and is used under license. Simplex, the Simplex logo, and MAPNET II are trademarks of Tyco International Ltd. and its affiliates and are used under license.



Tyco Safety Products Westminister • Westminister, MA • 01441-0001 • USA

S2190-0012-15 5/2010

www.tycosafetyproducts-usa-wm.com

© 2010 Tyco Safety Products Westminister. All rights reserved. All specifications and other information shown were current as of document revision date and are subject to change without notice.

Feature**Speaker/visible (S/V) notification appliances with multi-tapped speaker and multi-tapped high intensity xenon strobe with synchronized flash:**

- Rugged, high impact, flame retardant thermoplastic housings are available for wall or ceiling mount
- Operation is compatible with ADA requirements (refer to important wall mount installation information on page 4)

Wall mount S/V features:

- Housings are available in red or white with clear lens with contrasting white or red “FIRE” lettering
- Covers are available separately to convert housing color

Ceiling mount S/V features:

- Housing is white with clear lens
- Red “FIRE” lettering is printed on two sides

Audible notification appliance (speaker):

- High quality voice and tone reproduction with taps for ¼, ½, 1, or 2 W, at 25 or 70.7 VRMS
- Capacitor input for connection to supervised notification appliance circuits
- Speakers are wired separately from strobe wiring
- UL listed to Standard 1480 and ULC-S541*
- Compliant with NFPA 72, 520 Hz Low Frequency Signal Requirements for Sleeping Areas


Visible notification appliance (strobe):

- 24 VDC xenon strobe; intensity is selectable as 15, 30, 75, or 110 candela with visible selection jumper secured behind strobe housing
- Strobes are activated from NACs selected to provide Simplex® strobe synchronization signals or from separate strobe Synchronization Modules that are available for Class B or Class A operation
- Regulated circuit design ensures consistent flash output and provides controlled inrush current
- UL listed to Standard 1971 and ULC-S526*

Options for wall mounted S/Vs:

- Red or white adapters to cover surface mounted electrical boxes
- Red adapter for mounting to Simplex 2975-9145 boxes
- Red wire guard

* See page 2 for additional listing details and wire guard listings. This product has been approved by the California State Fire Marshal (CSFM) pursuant to Section 13144.1 of the California Health and Safety Code. See CSFM Listing 7320-0026.247 for allowable values and/or conditions concerning material presented in this document. Accepted for use – City of New York Department of Buildings – MEA35-93E. Additional listings may be applicable; contact your local Simplex product supplier for the latest status. Listings and approvals under Simplex Time Recorder Co. are the property of Tyco Fire Protection Products.

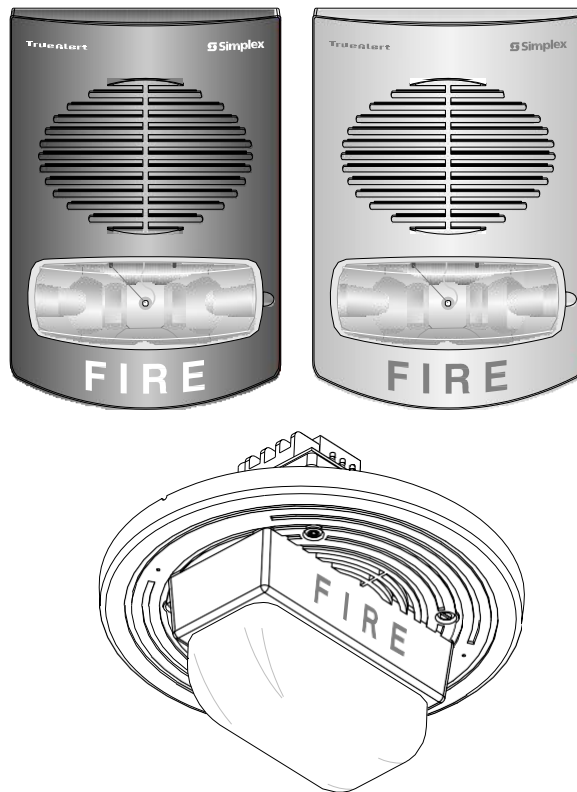

Wall and Ceiling Mount S/Vs

Descriptio

Multi-Candela TrueAlert S/Vs with speaker and synchronized strobe provide convenient installation to standard electrical boxes with extensions. The enclosure designs are both impact and vandal resistant and provide a convenient strobe intensity selection. Since each model can be selected for strobe intensity output, on-site model inventory is minimized and changes encountered during construction can be easily accommodated.

Wall mount S/V housings are a one-piece assembly (including lens) that mounts to a 4” square electrical box with extension (see details on page 4). The cover can be quickly removed (a tool is required) and covers are available separately for color conversion.

Ceiling mount S/Vs also install using 4” electrical boxes with an extension (see details on page 4).

Strobe Intensity Selection

During installation, a selection plug at the back of the housing determines the desired strobe intensity. An attached flag with black letters on a highly visible yellow background allows the selected intensity to be seen at the side of the strobe lens.

Synchronized Strobe

Multiple Strobes. When multiple strobes and their reflections can be seen from one location, synchronized flashes reduce the probability of photo-sensitive reactions as well as the annoyance and possible distraction of random flashing. The multi-candela strobes of these S/Vs are activated by NACs that provide the Simplex synchronization format. For additional information, refer to data sheet S4905-0003.

Strobe Application Selection

Proper selection of visible notification is dependent on occupancy, location, local codes, and proper applications of: the *National Fire Alarm and Signaling Code* (NFPA 72), ANSI A117.1; the appropriate model building code: BOCA, ICBO, or SBCCI; and the application guidelines of the Americans with Disabilities Act (ADA).

Product Selection

Wall Mount Multi-Candela S/Vs

Model	Housing Color	"FIRE" Lettering	Listings	Description	Housing Dimensions with Lens
4906-9151	Red	White	UL & ULC	Multi-tapped Speaker with Multi-Candela Synchronized Strobe; strobe intensity selectable as: 15, 30, 75, or 110 candela	7 ¼" H x 5" W x 2 ⅝" D (184 mm x 127 mm x 67 mm)
4906-9153	White	Red			

Ceiling Mount Multi-Candela S/V

Model	Housing Color	"FIRE" Lettering	Listings	Description	Dimensions
4906-9154	White	Red	UL	Multi-tapped Speaker with Multi-Candela Synchronized Strobe; strobe intensity selectable as: 15, 30, 75, or 110 candela	Housing = 7 ½" (191 mm) diameter, ½" (13 mm) deep Strobe lens protrusion = 2 ⅝" (67 mm) above speaker housing Depth into box = 2 ¾" (70 mm)
4906-9157	White	Red	ULC		

Wall Mount S/V Adapters

Model	Description	Dimensions
4905-9946	Surface mount red adapter skirt	7 ¾" H x 5 ⅝" W x 3 ⅜" D (197 mm x 137 mm x 81 mm) depth with S/V = 5 ⅞" (149 mm)
4905-9947	Surface mount white adapter skirt	
4905-9903	Adapter Plate, red, required to mount S/V on 2975-9145	8 ⅝" H x 5 ¾" W x 0.060" Thick (211 mm x 146 mm x 1.5 mm)
2975-9145	Mounting box, red, for surface or flush mount, requires adapter plate 4905-9903 (this box may be available for retrofit applications)	7 ⅞" H x 5 ⅞" W x 2 ¾" D (200 mm x 130 mm x 70 mm)

Wall Mount S/V Replacement Covers

Model	Description	Dimensions
4905-9996	Red S/V cover with white "FIRE" lettering	7 ¼" H x 5" W x 1 ⅜" D (184 mm x 127 mm x 35 mm)
4905-9997	White S/V cover with red "FIRE" lettering	

Synchronized Flash Control Modules

Model	Description	Dimensions
4905-9914*	Synchronized Flash Module, Class B operation	1 ⅜" W x 2 ⅞" L x 1 ⅜" H (35 mm x 62 mm x 20 mm)
4905-9922*	Synchronized Flash Module, Class A operation	

Wall Mount S/V Wire Guard

Model	Description	Dimensions
4905-9998	Wire guard with mounting plate, red, compatible with surface and semi-flush boxes (UL listed by Space Age Electronics Inc.)	8 ⅜" H x 6 ⅝" W x 3 ¼" D (213 mm x 154 mm x 79 mm)

Ceiling Mount Tile Bridge

Model	Description	Dimensions
2905-9946	Tile Bridge	See diagram on page 4

* Refer to data sheet S4905-0003 for additional flash control module information

S/V Specifications

Common Specifications	Environmental	32° to 122° F (0° to 50° C); 10% to 93%, non-condensing at 100° F (38° C)
	Connections	Terminal blocks for 18 AWG to 12 AWG (0.82 mm ² to 3.31 mm ²); two wires per terminal for in/outwiring

Speaker Specifications

Input Voltage	25 or 70.7 VRMS, see Note 1 below	
Power Taps	¼, ½, 1, and 2 W	
Frequency Response	Fire Alarm	400 to 4000 Hz
	General Signaling	125 to 12 kHz

Speaker Output Ratings @ 10 ft (3 m) (see Note 1 below)	Wattage Tap	¼ W	½ W	1 W	2 W
		UL Listed Models, Reverberant Chamber Test, per UL 1480	76 dBA	79 dBA	82 dBA
Wall Mount Models 4906-9151 and 4906-9153 , Anechoic Chamber Test, per ULC-S541		77 dBA	80 dBA	83 dBA	86 dBA*
Ceiling Mount Model 4906-9157 , per ULC-S541	25 VRMS Input	81.6 dBA	84.3 dBA	87.1 dBA*	89.7 dBA*
	70.7 VRMS Input	80.9 dBA	84.1 dBA	87.3 dBA*	90.2 dBA*

* **NOTE:** Select taps as indicated to satisfy the ULC fire alarm applications requirement of 85 dBA minimum

Polar Dispersion Reference (per ULC-S541 Anechoic Chamber Testing)	Attenuation	Angle	Attenuation	Angle
		-3 dB	+/- 30° off-axis	-6 dB

Strobe Specifications


Rated Voltage Range	Regulated 24 VDC; 16 VDC to 33 VDC, see Note 2 below
Flash Rate and Synchronized NAC Loading	1 Hz; with up to 35 synchronized strobes maximum per NAC

Wall Mount	Housing Dimensions (with lens)	7 ¼" H x 5" W x 2 5/8" D (184 mm x 127 mm x 67 mm)				
	Maximum RMS Current Rating per Strobe Setting		15 cd	30 cd	75 cd	110 cd
			60 mA	94 mA	186 mA	252 mA
	Reference RMS Currents at other voltages	18 VDC	53 mA	84 mA	165 mA	224 mA
24 VDC		40 mA	63 mA	124 mA	168 mA	
Ceiling Mount	Housing Dimensions	Speaker housing = 7 ½" (191 mm) diameter, ½" deep (13 mm); lens protrusion above speaker housing = 2 5/8" (67 mm); depth into box = 2 ¾" (70 mm)				
	Maximum RMS Current Rating per Strobe Setting		15 cd	30 cd	75 cd	110 cd
			75 mA	125 mA	233 mA	316 mA
	Reference RMS Currents at other voltages	18 VDC	67 mA	111 mA	207 mA	281 mA
24 VDC		50 mA	83 mA	155 mA	211 mA	


NOTES:

- Speakers are for connection to conventional fire alarm audio circuits. Anechoic speaker output ratings are typically more representative of actual installed sound output.
- The maximum RMS strobe current listed is the device nameplate rating. Strobe designs are constant wattage and the maximum RMS current rating occurs at the lowest allowable operating voltage. (RMS is root mean square and refers to the effective value of a varying current waveform.)


Speaker Directional Characteristics Reference

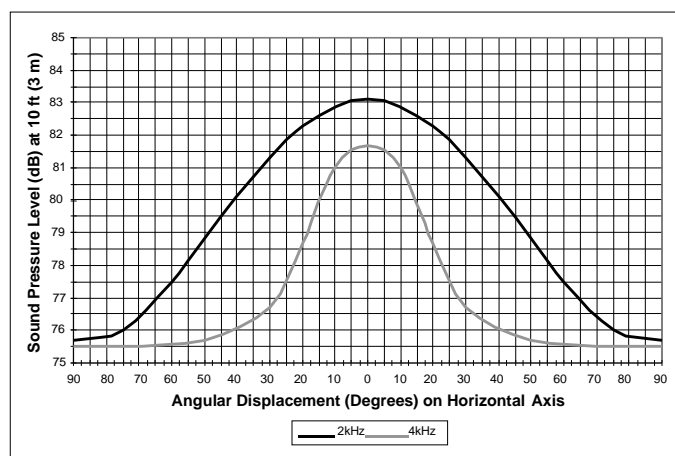

Ceiling Mount S/V Installation Reference and Tile Bridge Dimensions

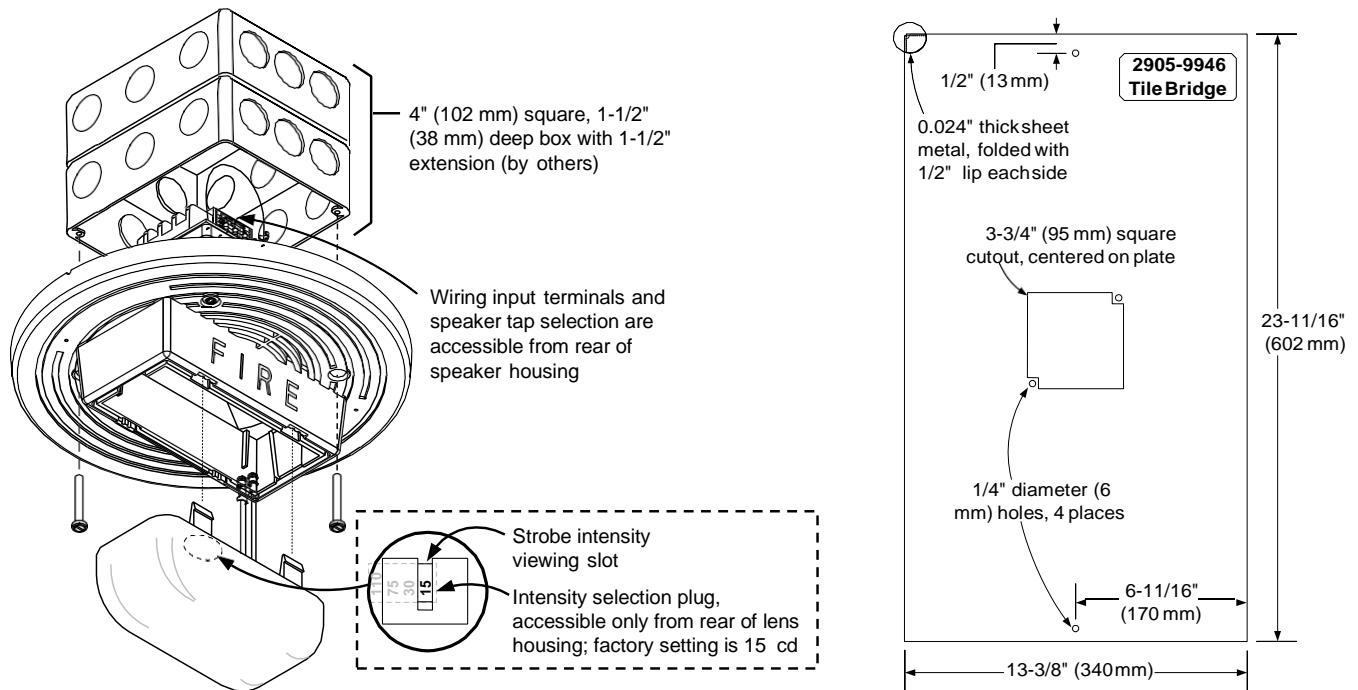

Wall Mount Installation Reference

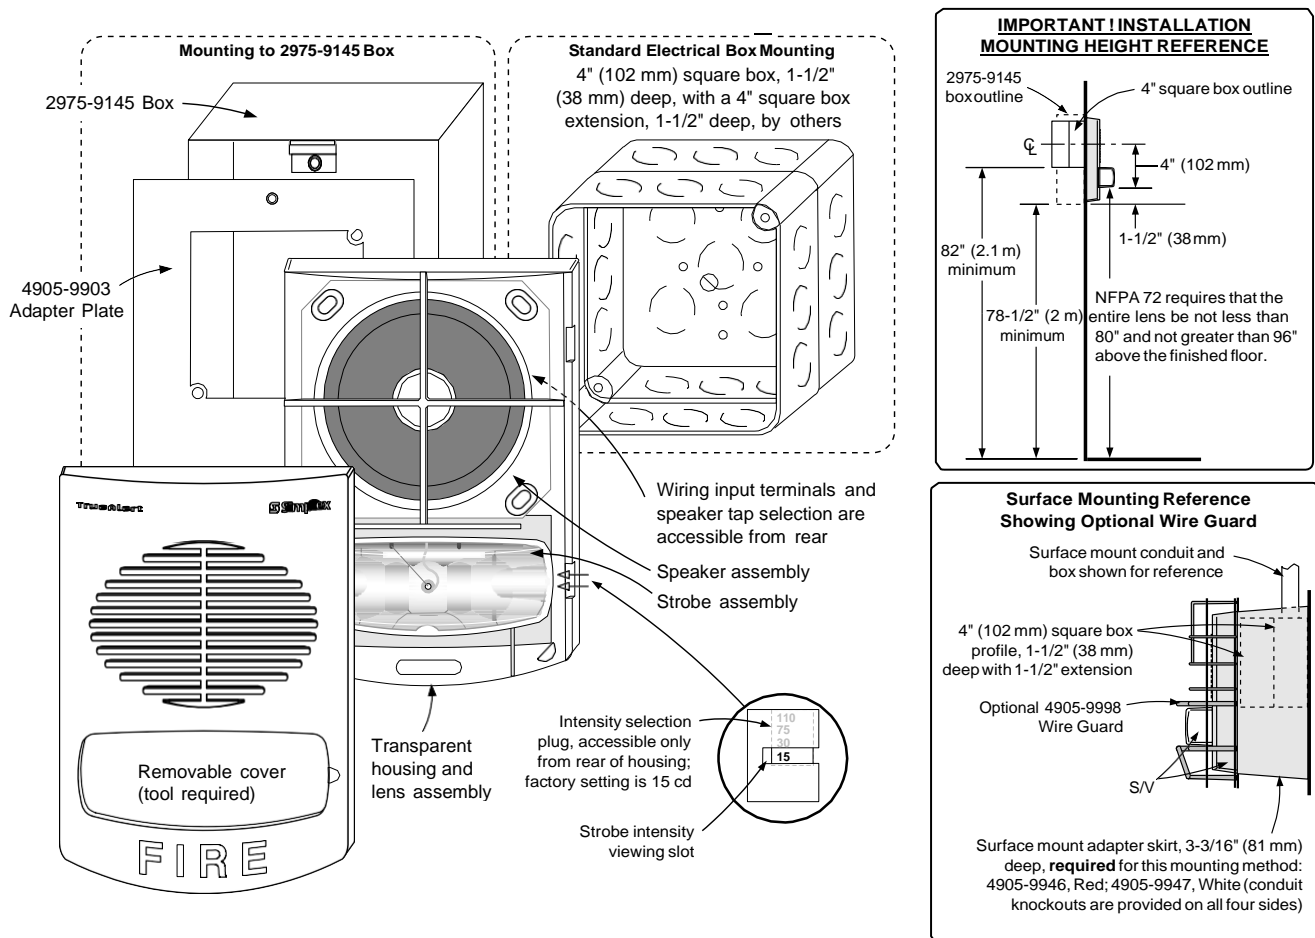

TYCO, SIMPLEX, and the product names listed in this material are marks and/or registered marks. Unauthorized use is strictly prohibited. NFPA 72 and National Fire Alarm and Signaling Code are registered trademarks of the National Fire Protection Association (NFPA).



Tyco Fire Protection Products • Westminister, MA • 01441-0001 • USA
www.simplex-fire.com

S4906-0003-8 5/2014

©2014 Tyco Fire Protection Products. All rights reserved. All specifications and other information shown were current as of document revision date and are subject to change without notice.

UL, ULC, CSFM Listed; FM Approved; MEA (NYC) Acceptance* Visible Notification Appliances with Synchronized Flash; Non-Addressable, SmartSync Operation Compatible

Feature

Visible only (V/O) 24 VDC notification appliances with high output xenon strobe, available for wall or ceiling mount:

- Intensity is selectable as 15, 30, 75, or 110 candela with visible selection jumper secured behind strobe housing
- Operation is compatible with ADA requirements (refer to important installation information on page 3)
- Polarized input allows connection to compatible reverse polarity, supervised notification appliance circuit (NAC)
- Regulated circuit design ensures consistent flash output and provides controlled inrush current
- Rugged, high impact, flame retardant thermoplastic housings are available in red or white with clear lens
- Listed to UL 1971 and ULC S526

Strobes provide synchronized flash for use with:

- Simplex® fire alarm control panels with NACs selected to provide strobe synchronization or SmartSync two-wire control
- 4009 IDNet NAC Extenders
- Separate strobe Synchronization Modules that are available for Class B or Class A operation
- Separate SmartSync Control Modules (SCMs) that provide Class B or Class A output from conventional NAC inputs

Strobe housings provides flexible, easy, and convenient semi-flush or surface wallmounting:

- Rear of housing does not extend into box
- Wall mount strobes easily mount to single gang, double gang, or 4-inch square outlet box
- Ceiling mount strobes mount to single gang boxes

Wall mount strobe features:

- Wiring terminals are accessible from the front of the housing providing easy access for installation, inspection, and testing
- Covers are available separately to convert housing color


Optional adapters and wire guards:

- Wall mount strobe adapters are available to cover surface mounted electrical boxes and to adapt to Simplex 2975-9145 boxes
- UL listed red wire guards are available for wall or ceiling mount strobes*

* Refer to page 2 for guard listing. This product has been approved by the California State Fire Marshal (CSFM) pursuant to Section 13144.1 of the California Health and Safety Code. See CSFM Listing 7125-0026:316 for allowable values and/or conditions concerning material presented in this document. Refer to page 2 for listing status of wire guards. Additional listings may be applicable; contact your local Simplex product supplier for the latest status. Listings and approvals under Simplex Time Recorder Co. are the property of Tyco Fire Protection Products.



Wall Mount Strobes

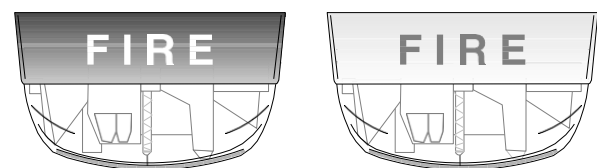

Ceiling Mount Strobes

Description

Multi-Candela TrueAlert synchronized strobes provide convenient installation to standard electrical boxes. The enclosure designs are both impact and vandal resistant and provide a convenient strobe intensity selection. Since each model can be selected for intensity output, on-site model inventory is minimized and changes encountered during construction can be easily accommodated.

Wall mount strobe housings are a one-piece assembly (including lens) that mounts to a single or double gang, or 4" square standard electrical box. The cover can be quickly removed (a tool is required) and covers are available separately for color conversion.

Ceiling mount strobes install using standard single gang electrical boxes. Color choice is determined by model number.

Strobe Intensity Selection

During installation, a selection plug at the back of the housing determines the desired strobe intensity. An attached flag with black letters on a highly visible yellow background allows the selected intensity to be seen at the side of the strobe lens.

Strobe Application Reference

Proper selection of visible notification is dependent on occupancy, location, local codes, and proper applications of: the *National Fire Alarm Code* (NFPA 72), ANSI A117.1; the appropriate model building code: BOCA, ICBO, or SBCCI; and the application guidelines of the Americans with Disabilities Act (ADA).

Synchronized Strobe

Multiple Strobes. When multiple strobes and their reflections can be seen from one location, synchronized flashes reduce the probability of photo-sensitive reactions as well as the annoyance and possible distraction of random flashing. These multi-candela strobes are synchronized over a two-wire circuit when connected to compatible NACs, to compatible Synchronized Flash Modules, or to SmartSync Control Modules.

SmartSync Two-Wire Control

Some applications desire the audible notification appliances to be capable of being silenced before the alarm condition is reset (on-until-silenced) while the visible notification appliances are kept activated until the alarm condition is reset (on-until-reset). SmartSync operation mode provides this function using a single circuit (two-wire operation).

SmartSync Control Sources

SmartSync two-wire control is available from:

- 4006, 4007ES Hybrid, 4008, 4010, 4010ES, 4100ES, and 4100U Fire Alarm Control Panels (refer to individual product data sheets for more information)
- 4009 IDNet NAC Extenders (refer to data sheet S4009-0002)
- SmartSync Control Module (SCM) Model 4905-9938 (refer to data sheet S4905-0003)

Additional SmartSync compatible notification appliances include separate horns and combination horn/strobe notification appliances.

Product Selection

Multi-Candela Visible Notification Appliances (Strobes)

Model	Mounting	Housing Color	"FIRE" Lettering	Description
4906-9101	Wall	Red	White	Multi-candela strobe with intensity selectable as: 15, 30, 75, or 110 candela; synchronized flash rate; SmartSync two-wire control compatible
4906-9103		White	Red	
4906-9102	Ceiling	Red	White	
4906-9104		White	Red	

Wall Mount Strobe Adapters

Model	Description	Dimensions
4905-9937	Red Surface Mount Adapter Skirt; use to cover 1-1/2" (38 mm) deep surface mounted boxes	5-3/8" H x 5-1/4" W x 1-5/8" D (136 mm x 133 mm x 41 mm) Total depth with strobe = 4-3/8" (111 mm)
4905-9940		
4905-9931	Red Adapter Plate for mounting to Simplex 2975-9145 box (typically for retrofit, may be mounted vertical or horizontal)	8-5/16" x 5-3/4" x 0.060" Thick (211 mm x 146 mm x 1.5 mm)
2975-9145	Red Mounting Box, requires Adapter Plate 4905-9931	7-7/8" x 5-1/8" x 2-3/4" D (200 mm x 130 mm x 70 mm)

Ceiling Mount Strobe Adapter

Model	Description	Dimensions
4905-9910	Surface Mount Adapter Plate; zinc plated; required for mounting to handy box; not needed when using 4905-9926 guard	4-7/8" x 3-1/8" x 0.060" D (124 mm x 79 mm x 1.5)

Synchronization Modules (refer to data sheet S4905-0003 for additional information)

Model	Description	Dimensions
4905-9914	Class B Synchronized Flash Module; epoxy encapsulated with in/out 18 AWG (0.82 mm ²) wire leads, rated for 2 A NAC, requires 5 mA for power	1-3/8" x 2-7/16" x 13/16" (35 mm x 62 mm x 20 mm)
4905-9922		
4905-9938	SmartSync Control Module with Class B or Class A output; mounts in 4" (102 mm) square box	4" x 4-1/8" x 1-1/4" D (102 mm x 105 mm x 32 mm)

Replacement Covers and Guards

Model	Description	Dimensions
4905-9992	Red cover with white "FIRE" lettering	For Wall mount strobes 5-1/8" H x 5" W x 1-1/2" D (130 mm x 127 mm x 38 mm)
4905-9993	White cover with red "FIRE" lettering	
4905-9961*	Wall mount	Red wire guard with mounting plate, compatible with semi-flush or surface mounted boxes 6-1/16" H x 6-1/16" W x 3-1/8" D (154 mm x 154 mm x 79 mm)
4905-9926*	Ceiling mount	

* UL listed by Space Age Electronics Inc.

Strobe Specification

Wall Mount or Ceiling Mount, Common Specifications


Rated Voltage Range		Regulated 24 VDC; see Note 1 below			
Flash Rate		1 Hz			
Synchronized NAC Loading		Up to 35 synchronized strobes maximum per NAC			
Temperature Range		32° to 122° F (0° to 50° C)			
Humidity Range		10% to 93%, non-condensing at 100° F (38° C)			
Connections		Terminal blocks for 18 AWG to 12 AWG (0.82 mm ² to 3.31 mm ²); two wires per terminal for in/out wiring			
Wall Mount	Housing Dimensions (with lens)	5-1/8" H x 5" W x 2-3/4" D (130 mm x 127 mm x 70 mm)			
	Maximum RMS Current Rating per Strobe Setting (see Note 2 below)	15 cd	30 cd	75 cd	110 cd
		60 mA	94 mA	186 mA	252 mA
	Reference RMS Currents at other voltages	18 VDC	53 mA	84 mA	165 mA
24 VDC		40 mA	63 mA	124 mA	168 mA
Ceiling Mount	Housing Dimensions (with lens)	4-3/4" L x 2-5/16" W x 2-5/8" D (121 mm x 75 mm x 67 mm)			
	Maximum RMS Current Rating per Strobe Setting (see Note 2 below)	15 cd	30 cd	75 cd	110 cd
		75 mA	125 mA	233 mA	316 mA
	Reference RMS Currents at other voltages	18 VDC	67 mA	111 mA	207 mA
24 VDC		50 mA	83 mA	155 mA	211 mA

NOTES:


1. "Regulated 24 VDC" refers to the voltage range of 16 to 33 VDC per UL Standard 1971, *Signaling Devices for the Hearing Impaired*. This voltage range is the absolute operating range. Operation outside of this range may cause permanent damage to the strobe. Please note that 16 VDC is the lowest operating voltage that is allowed at the last appliance on the NAC under worst case conditions.
2. The maximum RMS current listed is the device nameplate rating. Strobe designs are constant wattage and the maximum RMS current rating occurs at the lowest allowable operating voltage. (RMS is root mean square and refers to the effective value of a varying current waveform.)

Installation Reference, Surface or Semi-Flush Wall Mountin


Mounting is compatible with single gang, double gang, and 4" (102 mm) square boxes, 1-1/2" (38 mm) deep, by others

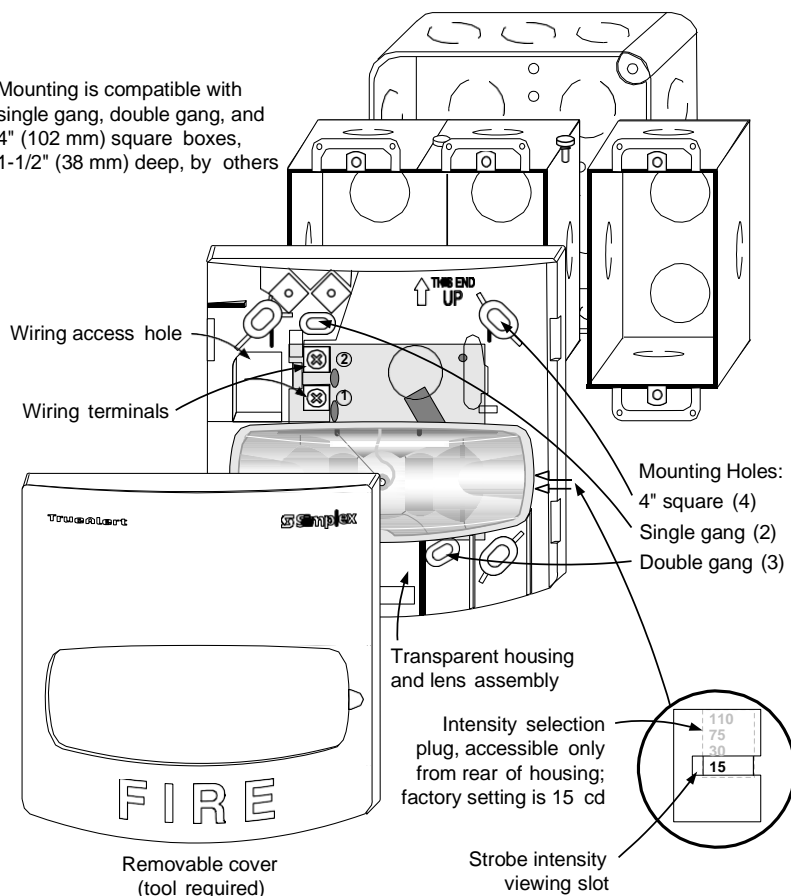



IMPORTANT! WALL MOUNT INSTALLATION HEIGHT REFERENCE

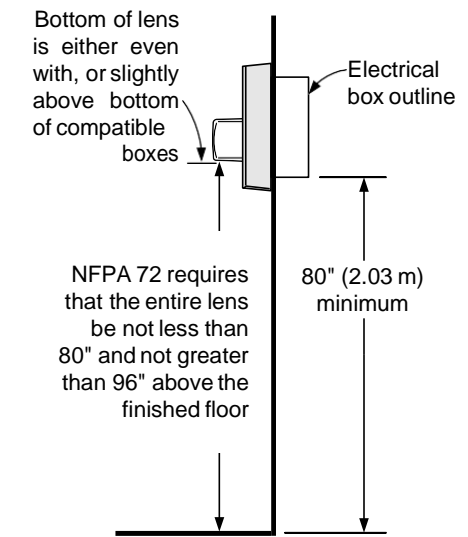

Ceiling Mount Strobe Installation Reference

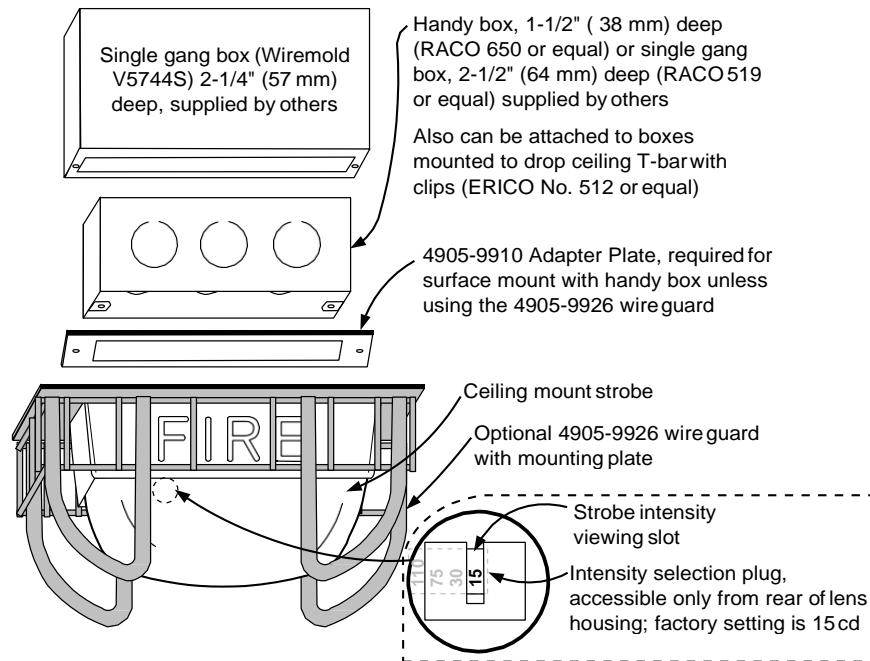

Wall Mount Installation Reference; Adapter Plate, Guard, and Adapter Skirt

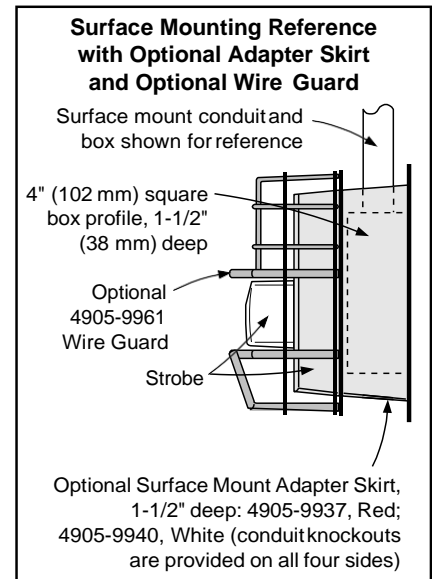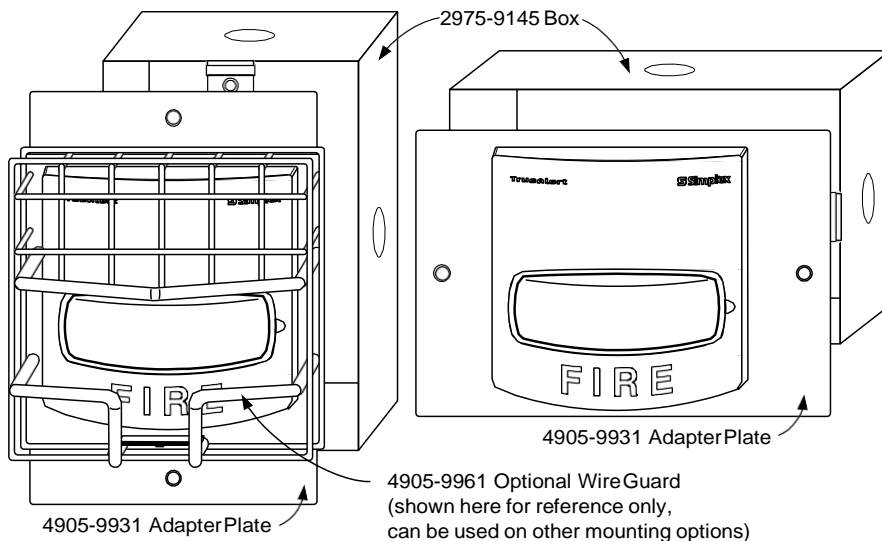

TYCO, SIMPLEX, and the product names listed in this material are marks and/or registered marks. Unauthorized use is strictly prohibited. NFPA 72 and National Fire Alarm and Signaling Code are registered trademarks of the National Fire Protection Association (NFPA).



Tyco Fire Protection Products • Westminster, MA • 01441-0001 • USA

S4906-0001-5 11/2014

www.simplex-fire.com

© 2014 Tyco Fire Protection Products. All rights reserved. All specifications and other information shown were current as of document revision date and are subject to change without notice.



HARDWARE WARRANTY

- 1) JOHNSON CONTROLS WARRANTY STATEMENT:
 - a) JOHNSON CONTROLS WARRANTS TO THE PURCHASER OF NEW JOHNSON CONTROLS PRODUCT(S) THAT THE PRODUCTS SHALL BE FREE FROM DEFECTS IN WORKMANSHIP AND MATERIAL.
- 2) WARRANTY PERIOD:
 - a) THE WARRANTY PERIOD WILL TERMINATE IMMEDIATELY FOLLOWING THE EARLIEST OCCURRENCE OF EITHER OF THE FOLLOWING:
 - i) 18 MONTHS HAVE ELAPSED FOLLOWING SHIPMENT OF ANY SYSTEM OR SUB-SYSTEM FROM JOHNSON CONTROLS TO THE CUSTOMER, OR
 - ii) 12 MONTHS HAVE ELAPSED FOLLOWING THE FINAL CONNECTION OPERATION AND BENEFICIAL USE OF ALL OR ANY PART OF THE SYSTEM.
 - iii) AS STATED IN THE SPECIFICATIONS AND/OR CONTRACT DRAWINGS
- 3) JOHNSON CONTROLS OBLIGATION UNDER THE TERMS OF THE WARRANTY:
 - a) JOHNSON CONTROLS'S SOLE RESPONSIBILITY SHALL BE TO REPAIR, ADJUST OR REPLACE, AT ITS OPTION, ANY JOHNSON CONTROLS PRODUCT WHICH FAILS DURING THIS PERIOD PROVIDING PURCHASER HAS PROMPTLY REPORTED SUCH FAILURE TO JOHNSON CONTROLS IN WRITING. REPLACEMENT PARTS WILL BE WARRANTED ONLY FOR THE BALANCE OF THE EQUIPMENT WARRANTY. JOHNSON CONTROLS AGREES TO CONTINUE TO HONOR ALL OF THE UNEXPIRED EXPRESSED WARRANTIES SPECIFIED ABOVE ON DEFECTIVE EQUIPMENT AFTER TRANSFER OF THE EQUIPMENT TO PURCHASER'S CUSTOMER, PROVIDED PURCHASER'S CUSTOMER ASSUMES THE PURCHASER'S OBLIGATIONS SPECIFIED BELOW.
 - b) EXCEPT FOR THE EXPRESSED WARRANTIES STATED HEREIN, JOHNSON CONTROLS DISCLAIMS ALL WARRANTIES ON PRODUCTS FURNISHED HEREUNDER, INCLUDING WITHOUT LIMITATION, ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, AND THE STATED WARRANTIES ARE IN LIEU OF ALL OBLIGATIONS OR LIABILITIES ON THE PART OF THE JOHNSON CONTROLS ARISING OUT OF OR IN CONNECTION WITH THE PERFORMANCE OF THE PRODUCTS. THE SELLER SHALL NOT BE LIABLE FOR ANY DIRECT, INCIDENTAL OR CONSEQUENTIAL LOSS OR DAMAGE TO THE PRUCHASER OR USER OF THIS EQUIPMENT ARISING OUT OF THE FAILURE OF THE EQUIPMENT TO OPERATE IN EXCESS OF THE PURCHASE PRICE OF SAID EQUIPMENT.
 - c) JOHNSON CONTROLS MAKES NO WARRANTY AND NO WARRANTY SHALL BE DEEMED TO EXIST, THAT PURCHASER HOLDS THE GOODS FREE OF THE CLAIM OF ANY THIRD PERSON BYWAY OF PATENT INFRINGEMENT OR THE LIKE.
- 4) PURCHASER'S OBLIGATIONS UNDER THE TERMS OF THE WARRANTY.
 - a) THIS WARRANTY IS CONTINGENT UPON THE PROPER INSTALLATION AND USE OF THE PRODUCT(S). SUCH WARRANTY SHALL NOT APPLY IF THE PRODUCT FAILURE IS THE RESULT OF ACCIDENT, UNUSUAL PHYSICAL, ELECTRICAL OR ELECTROMECHANICAL STRESS, NEGLIGENCE, MISUSE, USER PROGRAMMING ERRORS, FAILURE OF ELECTRICAL POWER, AIR CONDITIONING OR HUMIDITY CONTROL, CONSTRUCTION DUST, DAMAGING FOREIGN SUBSTANCES, TRANSPORTATION OR CAUSES OTHER THAN MANUFACTURING DEFECT. PURCHASER AGREES TO PROVIDE FULL AND FREE ACCESS TO AUTHORIZED JOHNSON CONTROLS EMPLOYEES.

WARRANTY SERVICE HOURS:

 - b) SERVICES PROVIDED UNDER THIS WARRANTY WILL BE PERFORMED DURING THE HOURS OF 8:00A.M. TO 5:00P.M., MONDAY THROUGH FRIDAY, EXCLUDING LOCALLY OBSERVED JOHNSON CONTROLS HOLIDAYS. OFF HOURS RESPONSE IS AVAILABLE AS AN EXTRA COST SERVICE OPTION.
- 5) WARRANTY EXCLUSIONS:
 - a) LABOR, TRAVEL, AND MILEAGE FOR:
 - i) SERVICE OUTSIDE OF JOHNSON CONTROLS NORMAL BUSINESS HOURS.
 - ii) PROGRAMMING AND/OR LABEL CHANGES.
 - iii) FAILURE DUE TO EXTERNAL CAUSES (LIGHTNING SURGES, CONSTRUCTION DUST, ETC.) OTHER THAN MANUFACTURING DEFECT.
 - b) ELECTRICAL WORK EXTERNAL TO THE EQUIPMENT SUPPLIED BY JOHNSON CONTROLS OR MAINTENANCE OF ACCESSORIES, ALTERATIONS, ATTACHMENTS OR OTHER DEVICES NOT FURNISHED BY JOHNSON CONTROLS.
 - c) BATTERIES
 - d) COVERAGE OF EQUIPMENT CLASSED AS A WATER FLOW MONITORING/CONTROL DEVICES INSTALLED IN OR ON WATER PIPING.



This Page Left Blank Intentionally



MANUFACTURER'S RECOMMENDATION

1. CONTRACTOR IS EXPECTED TO PULL AND TERMINATE ALL CONDUCTORS AND INSTALL ALL DEVICES FOR A COMPLETE AND OPERATING SYSTEM.
2. WHERE FAN SHUTDOWN, ELEVATOR RECALL OR SPECIAL AUXILIARY FUNCTIONS ARE REQUIRED, CONTRACTOR IS TO VERIFY WIRING REQUIREMENTS WITH THE JOHNSON CONTROLS FACTORY TECHNICIAN ASSIGNED TO THE PROJECT (IN MANY CASES, SPECIAL WIRING WILL NOT BE SHOWN ON THE DRAWINGS).
3. WHERE POSSIBLE, THE CONTRACTOR IS TO USE COLOR CODE FOR ALL WIRING.
4. SMOKE DETECTORS ARE NOT TO BE MOUNTED WITHIN 3 FEET OF AIR OUTLETS.
5. CONTRACTOR MUST NOT INSTALL SMOKE DETECTOR HEADS IN BASES OR DUCT HOUSING UNTIL FINAL CHECKOUT TIME TO INSURE THAT DIRT OR DUST DOES NOT CONTAMINATE THE UNITS. DIRTY DETECTORS ARE NOT COVERED BY WARRANTY.
6. DO NOT POWER-UP SYSTEM UNTIL JOHNSON CONTROLS FACTORY TECHNICIAN IS PRESENT.
7. A SEPARATE GROUND (ISOLATION FROM CONDUIT GROUND) MUST BE PULLED TO ALL CABINETS.
8. LOADS GREATER THAN 10 AMPS (FOR AUXILIARY FUNCTIONS) ARE NOT ALLOWED IN THE SAME CONDUIT AS FIRE ALARM.
9. CONTRACTOR IS TO ENSURE THAT ALL WIRING AND SHIELDS ARE FREE OF SHORTS, GROUNDS AND OPENS.
10. UNDERGROUND WIRING MUST MAINTAIN ONE MEGAOHM, 20F RESISTANCE TO GROUND.
11. ANY MANUFACTURER'S RECOMMENDATION IN CONFLICT WITH ENGINEERING DRAWINGS OR SPECIFICATIONS SHALL BE BROUGHT TO THE ATTENTION OF THE ENGINEER FOR CLARIFICATION. CONTRACTOR SHALL ADVISE JOHNSON CONTROLS OF ANY CHANGES.
12. PROTECTIVE COVERS ON SMOKE DETECTORS ARE NOT TO BE REMOVED UNTIL OWNERS ACCEPTANCE OF THE SYSTEM. (PREVENTS CONTAMINATION OF SMOKE CHAMBER).
13. IT IS THE CONTRACTOR'S RESPONSIBILITY TO REQUEST THE STATE OR LOCAL FIRE MARSHAL TO BE ON SITE FOR FINAL ACCEPTANCE AND CHECK OUT IF REQUIRED.
14. IT IS THE CONTRACTOR'S RESPONSIBILITY TO INVENTORY ALL EQUIPMENT RECEIVED FROM JOHNSON CONTROLS AGAINST THE CONTRACT DOCUMENTS AND REPORT ANY DISCREPANCIES WITHIN THIRTY (30) DAYS OR JOHNSON CONTROLS WILL ASSUME THE ORDER TO BE ACCURATE AND COMPLETE.
 - a. *NOTE: IN THE EVENT OF DISCREPANCIES IN THE NUMBER OF DEVICES SUPPLIED, THE FOLLOWING JOHNSON CONTROLS POLICY WILL APPLY:
 - i. TOO FEW DEVICES: IF THE DEVICE IS SHOWN ON THE CONTRACT DOCUMENTS AND HAS NOT BEEN ADDED AS A RESULT OF A POST BID ADDITION OR CHANGE ORDER, JOHNSON CONTROLS WILL SUPPLY THE DEVICE AT NO CHARGE TO THE CONTRACTOR OR END USER PER JOHNSON CONTROLS'S CONTRACT OBLIGATIONS.
 - ii. TOO MANY DEVICES: IF THE DEVICE SHOWN IS EXTRA, DUE TO A POST BID ADDITION OR CHANGE ORDER; IT REMAINS THE PROPERTY OF THE CONTRACTOR OR END USER. IF THE DEVICE IS EXTRA DUE TO AN ERROR IN QUANTITIES SUPPLIED, THE DEVICE MUST BE RETURNED TO JOHNSON CONTROLS. NO CREDIT WILL BE ISSUED FOR THE RETURN OF EXTRA EQUIPMENT ABOVE THE QUANTITIES GIVEN IN THE CONTRACT DOCUMENTS.
15. OWNERS PRESENCE FOR FINAL DEMONSTRATION AND ACCEPTANCE.



SPECIAL INSTRUCTIONS-JOHNSON CONTROLS

1. JOHNSON CONTROLS WILL PROVIDE WIRING INSTRUCTIONS FOR INSTALLATION OF JOHNSON CONTROLS EQUIPMENT.
2. JOHNSON CONTROLS WILL PROVIDE A FACTORY TRAINED TECHNICIAN TO ASSIST IN TRAINING:
 - a. OPERATION OF THE CONTROL PANEL AND FUNCTIONS
 - b. ALARM TEST OF ALL JOHNSON CONTROLS PERIPHERAL DEVICES (SMOKE DETECTOR, MANUAL PULL STATION, ETC.)
 - c. SUPERVISE TEST OF ALL INITIATING, SIGNALING, AND CONTROL CIRCUITS.
3. JOHNSON CONTROLS WILL PROVIDE (1) INSTRUCTION AT FINAL TEST OF THE SYSTEM TO:
 - a. OWNER REPRESENTATIVE
 - b. FIRE INSPECTOR AND ELECTRICAL INSPECTOR
 - c. ARCHITECT AND ENGINEER
4. UPON COMPLETION OF FINAL TEST, JOHNSON CONTROLS WILL PROVIDE:
 - a. TEST REPORT
 - b. CERTIFICATION (IF REQUIRED)
 - c. ONE YEAR WARRANTY



TESTING PROCEDURE FOR DEVICES

GENERAL:

FOR ALL DEVICES (SUPPLIED BY JOHNSON CONTROLS) VISUALLY VERIFY PROPER LOCATION AND INSTALLATION.

SMOKE DETECTOR:

ACTIVATE THE DEVICE USING A SMOKE GENERATOR AND VERIFY ALARM CONDITION ON PANEL. RESET PANEL AND VERIFY RESET OF SMOKE DETECTOR AND PANEL. TEST FOR ALARM VERIFICATION IF APPROPRIATE.

HEAT DETECTOR:

FIXED TEMPERATURE REPLACEMENT ELEMENT - REMOVE ELEMENT ON HEAT DETECTOR TO INITIATE ALARM AND VERIFY ALARM CONDITION AT PANEL. REINSTALL ELEMENT, RESET SYSTEM, AND VERIFY.

NON-REPLACEABLE ELEMENT - NON-REPLACEABLE ELEMENT HEAT DETECTORS CAN ONLY BE TESTED FOR CONTINUITY.

RATE-OF-RISE DETECTORS - RATE OF RISE DETECTORS ARE TESTED WITH A HEATER OR BLOW DRYER UNTIL THEY INITIATE ALARM, THEN ALLOWED TO COOL. RESET PANEL AND VERIFY.

PULL STATIONS:

ACTIVATE STATION WITH THE T-HANDLE, VERIFY ALARM AND LABEL FOR LOCATION, RESET STATION, RESET PANEL.

DUCT DETECTOR:

(IF PROVIDED BY JOHNSON CONTROLS) WITH AIR HANDLING UNIT TURNED ON, OPEN ONE OF THE TEST PORT HOLES BY REMOVING THE RED COVER ON THE DUCT DETECTOR/SENSOR HOUSING. USING AN EXTENDED NOZZLE ON THE SMOKE DETECTOR AEROSOL TESTER SPRAY A FOUR TO EIGHT SECOND BURST OF AEROSOL THROUGH THE TEST PORT BUT NOT DIRECTLY AT THE DETECTOR/SENSOR HEAD. THE NOZZLE OF THE SMOKE DETECTOR AEROSOL TESTER SHOULD NOT EXTEND BEYOND THE INLET TUBE. AEROSOL IS SPRAYED INTO THE STREAM OF INCOMING AIR AND NOT DIRECTLY INTO DETECTOR/SENSOR. VERIFY ALARM, TEST ALL INDICATORS OR MANUAL TEST SWITCHES, RESET DETECTOR, RESET PANEL, TEST SAMPLE AND REFERENCE TUBE FOR POSITIVE AIR FLOW. (IF NOT PROVIDED BY JOHNSON CONTROLS) VERIFY THAT ZONE CIRCUIT IS PRESENT AT THE DEVICE.

AUDIBLES AND VISIBLES:

ACTIVATE ALARM AND CONFIRM THAT ALL INDICATING APPLIANCES, AUDIBLES AND VISIBLES, ARE OPERATING.

DOOR HOLDERS:

VERIFY THAT DOORS CLOSE ON ALARM.

VALVE SUPERVISORY SWITCHES (TAMPER):

(IF PROVIDED BY JOHNSON CONTROLS) ACTIVATE SWITCH BY MOVING VALVE OFF NORMAL, VERIFY STATUS CHANGE, RESET SWITCH, RESET PANEL. (IF NOT PROVIDED BY JOHNSON CONTROLS) VERIFY THAT ZONE CIRCUIT IS PRESENT AT THE SWITCH.

FLOW SWITCHES AND PRESSURE SWITCHES:

(IF PROVIDED BY JOHNSON CONTROLS) ACTIVATE SWITCH (WITH SPRINKLER CONTRACTOR PRESENT) BY A FLOW OF WATER, VERIFY STATUS CHANGE, RESET SWITCHES, RESET PANEL. (IF NOT PROVIDED BY JOHNSON CONTROLS) VERIFY THAT ZONE CIRCUIT IS PRESENT AND SUPERVISED AT THE SWITCH.

FAN/DAMPER CONTROL CIRCUITS:

VERIFY (WITH HVAC CONTRACTOR PRESENT) THAT THE CONTROL CIRCUIT IS OPERATING AND THE DEVICES IS BEING CONTROLLED IN ACCORDANCE WITH THE SPECIFIED SEQUENCE OF OPERATION.

ELEVATOR CONTROL CIRCUITS:

VERIFY (WITH ELEVATOR CONTRACTOR PRESENT) THAT THE ELEVATOR IS BEING CONTROLLED IN ACCORDANCE WITH THE SPECIFIED SEQUENCE OF OPERATION.

TRAINING:

JOHNSON CONTROLS SHALL PROVIDE A ONE TRAINING SESSION TO THE CUSTOMER.

WARRANTY:

THE SYSTEM SHALL BE PROVIDED WITH A ONE YEAR HARDWARE WARRANTY.